



BS EN/EN62368-1



AS/NZS 62368.1


 TPTC004  
(Pending)


CB



CE


 UK  
CA


Security



Network



Telecom



Automate



Industrial


## ■ Features

- Universal input 90~305VAC (277VAC available)
- All-in-one function with Power supply, DC-UPS, battery charger and status monitoring in ONE compact unit
- Signal and alarms design meet UL2524, NFPA 1221, BS EN/EN54-4 and GB17945 requirement, with adjustable parameters configurable by communication interface
- Form C relay contacts and LED indicators for AC Fail, Battery Low, Charger Fail, and DC-OK
- Load-dependent high speed battery charging
- Built-in MODBus protocol, CANBus optional
- Protections: Short circuit / Overload / Over voltage / Over temperature(auto derating) / Battery reverse polarity (No damage) / Battery cut off
- Battery low protection / Battery reverse polarity protection
- 30 ~ +70°C wide operating temperature
- Cooling by free air convection
- Can be installed on DIN rail TS-35/7.5 or 15
- Charging curve can be set with SBP-001  
(Smart programmer sold separately, please refer to: <https://www.meanwell.com/webapp/product/search.aspx?prod=SBP-001>)
- 20~100% charging current adjustable by VR
- 2 or 3-stage selectable by DIP S.W
- Suitable for lead acid and lithium-ion batteries
- 3 years warranty

## ■ Description

DRS-480 is a 480W AC/DC DIN rail type security power supply series. In addition to the primary output, there is an additional charger circuit that will automatically adjust charge current depending on the primary output current. DRS-480 accepts the universal input between 90VAC and 305VAC, and supports output 24VDC, 36VDC, and 48VDC nominal systems. With high efficiency up to 93.5%, it can operate with free air convection cooling under -30°C through 70°C ambient temperature. In addition to the key protection features such as overload protection, over voltage protection, battery low voltage disconnect, and battery reverse polarity protection, the DRS-480 also provides Form-C contacts and LED indicator alarm signals for AC-fail, battery low, charger fail, and DC-OK to allow easy integration into security systems that comply with local alarm codes.

## ■ Model Encoding

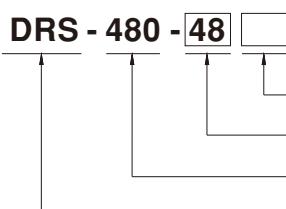

Function option(Blank: Built-in MODBus, CAN: CANBus optional)  
 Output voltage(24V/36V/48V)  
 Rated wattage  
 Series name

## ■ Applications

- Public safety battery back-up (Red box)
- Security system
- Emergency lighting system
- Alarm system
- Uninterruptible DC-UPS system, battery detection system
- Central monitoring system
- Industrial automation


## ■ GTIN CODE

 MW Search: <https://www.meanwell.com/serviceGTIN.aspx>


## SPECIFICATION

MODEL	DRS-480-24		DRS-480-36		DRS-480-48						
OUTPUT	OUTPUT VOLTAGE Note.2	24V	36V	48V							
	LOAD CURRENT RANGE	0 ~ 20A	0 ~ 13.3A	0 ~ 10A							
	BATTERY CURRENT (CC)(max.)	15.4A	10.2A	7.7A							
	RECOMMENDED BATTERY CAPACITY(AMP HOURS) Note.3	20 ~ 200AH	13 ~ 133AH	10 ~ 100AH							
	TOTAL OUTPUT POWER Note.4	Combined power on all Channels must not exceed 480W, load has priority. 550W peak capability within 5s.									
	RIPLE & NOISE (max.) Note.5	240mVp-p	360mVp-p	480mVp-p							
	VOLTAGE TOLERANCE Note.6	±1.0%	±1.0%	±1.0%							
	LINE REGULATION	±0.5%	±0.5%	±0.5%							
	LOAD REGULATION	±0.5%	±0.5%	±0.5%							
	SETUP RISETIME Note.7	2400ms, 1000ms/230VAC	2400ms, 1000ms/115VAC at full load								
INPUT	HOLD UP TIME (Typ.)	16ms/230VAC	10ms/115VAC at full load								
	VOLTAGE RANGE	90 ~ 305VAC	127 ~ 431VDC								
	FREQUENCY RANGE	47 ~ 63Hz									
	POWER FACTOR (Typ.)	PF>0.95/230VAC	PF>0.98/115VAC at full load								
	EFFICIENCY (Typ.)	92.5%	93.5%	93.5%							
	AC CURRENT (Typ.)	5.4A/115VAC	2.7A/230VAC								
PROTECTION	INRUSH CURRENT (Typ.)	COLD START 30A/115VAC	60A/230VAC								
	SHORT CIRCUIT	Protection type: Constant current limiting, power will shutdown after 5 sec, re-power on to recover.									
	OVERLOAD	105 ~ 135% rated output power									
		Protection type: Constant current limiting, shutdown output voltage after 5 sec.									
	OVER TEMPERATURE	Automatically drop load with temperature only for bat. load.									
		Protection type : Shut down o/p voltage, recover automatically after temperature goes down.									
FUNCTION	FORM-C RELAY	OVER VOLTAGE	Load main output : 32.4 ~ 37.3V	Load main output : 48.6 ~ 55.9V	Load main output : 64.8 ~ 74.5V						
			Protection type : Shut down o/p voltage, re-power on to recover								
		BATTERY CUT OFF	20.9 ± 0.5V	31.3 ± 0.7V	41.8 ± 1V						
		REVERSE POLARITY	By internal MOSFET, no damage, recovers automatically after fault condition is removed.								
	BATTERY LOW/ ABNORMAL/ DISCONNECTED	AC FAIL	Signals AC failure and activates when input voltage drops below : 79~89VAC of 120AC, 132~187VAC of 220VAC.								
		CHARGER FAIL	Relay contact output, ON : AC OK ; OFF : AC Fail ; max. rating : 30Vdc/1A								
ENVIRONMENT	DC OK	DC OK	Signals normal DC output and activates when output voltage > 90% rated value.								
			Relay contact output, ON : DC OK ; OFF : DC Fail ; max. rating : 30Vdc/1A								
		BATTERY LOW/ ABNORMAL/ DISCONNECTED	Relay contact output, ON : Battery OK ; OFF : Battery Low ; max. rating : 30Vdc/1A								
			Battery low voltage : < 22V ± 0.3V	Battery low voltage : < 33V ± 0.4V	Battery low voltage : < 44V ± 0.5V						
	BATTERY START	Restart system directly from battery and does not require AC power									
	DC-UPS	UPS switch to battery power within 10ms of AC failure									
SAFETY & EMC (Note.10)	ADJUSTABLE CHARGING CURRENT	20% ~ 100% charging current adjustable by VR									
	WORKING TEMP.	-30 ~ +70°C (Refer to "Derating Curve")									
	WORKING HUMIDITY	20 ~ 90% RH non-condensing									
	STORAGE TEMP., HUMIDITY	-40 ~ +85°C, 10 ~ 95% RH non-condensing									
	TEMP. COEFFICIENT	±0.03%/°C (0 ~ 50°C) on Load output									
	VIBRATION	10 ~ 500Hz, 5G 10min./1cycle, 60min. each along X, Y, Z axes									
	OPERATING ALTITUDE Note.8	2000 meters / OVC III									
	OVER VOLTAGE CATEGORY	III; According to Dekra BS EN/EN62368-1; altitude up to 2000 meters									
	SAFETY STANDARDS	UL62368-1, Dekra BS EN/EN62368-1, RCM AS/NZS 62368.1 approved; EAC TP TC 004 pending									
	WITHSTAND VOLTAGE	I/P-O/P: 4KVAC I/P-FG: 2KVAC O/P-FG: 1.5KVAC									
OTHERS	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG: 100M Ohms/500VDC/25°C / 70%RH									
	EMC EMISSION	Parameter	Standard	Test Level / Note							
		Conducted	BS EN/EN55032 (CISPR32)	Class B							
		Radiated	BS EN/EN55032 (CISPR32)	Class B							
		Harmonic Current	BS EN/EN61000-3-2	----							
	EMC IMMUNITY	Voltage Flicker	BS EN/EN61000-3-2	----							
		BS EN/EN55035 , BS EN/EN61204-3, BS EN/EN61000-6-2(BS EN/EN50082-2)									
		Parameter	Standard	Test Level / Note							
		ESD	BS EN/EN1000-4-2	Level 3, 8KV air ; Level 2, 4KV contact; criteria A							
		Radiated	BS EN/EN1000-4-3	Level 3, 10V/m ; criteria A							
		EFT / Burst	BS EN/EN1000-4-4	Level 3, 2KV ; criteria A							
NOTE	Surge	BS EN/EN1000-4-5	Level 3, 1KV/Line-Line ;Level 3, 2KV/Line-Line-Chassis ;criteria A								
	Conducted	BS EN/EN1000-4-6	Level 3, 10V ; criteria A								
	Magnetic Field	BS EN/EN1000-4-8	Level 4, 30A/m ; criteria A								
	MTBF	556.6K hrs min. Telcordia SR-332 (Bellcore); 74.5K hrs min. MIL-HDBK-217F (25°C)									
DIMENSION	110*125.2*150.7mm (W*H*D)										
	PACKING		1.65Kg; 6pcs/ 11Kg / 1.42CUFT								
NOTE	1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature.										
	2. Variable with charger voltage when battery is connected.										
	3. This is Mean Well's suggested range. Please consult your battery manufacturer for their suggestions about maximum charging current limitation.										
	4. If load current increases, the system will prioritize load current demand and automatically reduce the battery charging current.										
	5. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uf & 47uf parallel capacitor.										
	6. Tolerance : includes set up tolerance, line regulation and load regulation.										
	7. Length of setup time is measured at cold first start, Turning ON/OFF the power supply may lead to increase of the setup time.										
	8. The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft).										
	9. Installation clearances : 40mm on top, 20mm on the bottom, 5mm on the left and right side are recommended when loaded permanently with full power. In case the adjacent device is a heat source, 15cm clearance is recommended.										
	10. The power supply is considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies." (available on <a href="http://www.meanwell.com">http://www.meanwell.com</a> )										
※ Product Liability Disclaimer : For detailed information, please refer to <a href="https://www.meanwell.com/serviceDisclaimer.aspx">https://www.meanwell.com/serviceDisclaimer.aspx</a>											


## ■ Block Diagram

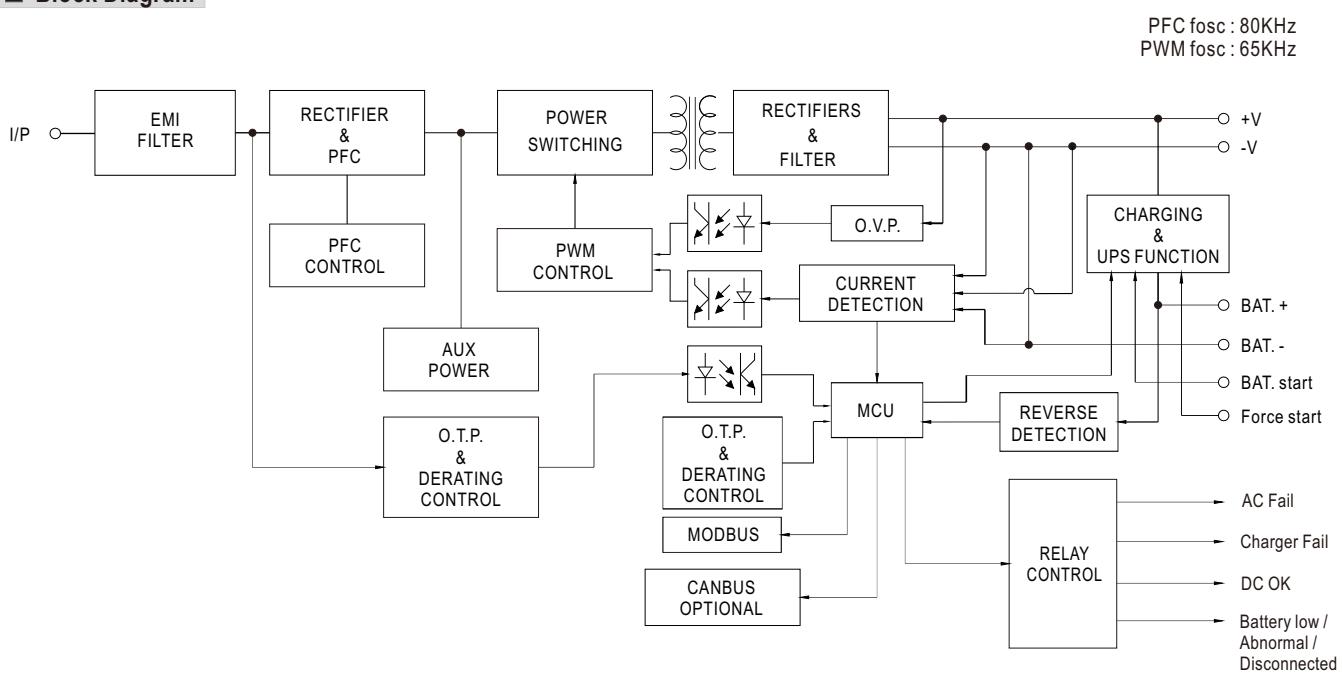

## ■ Derating Curve

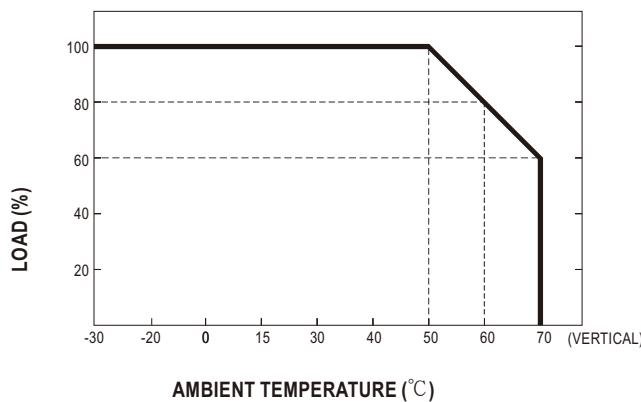

## ■ Static Characteristics

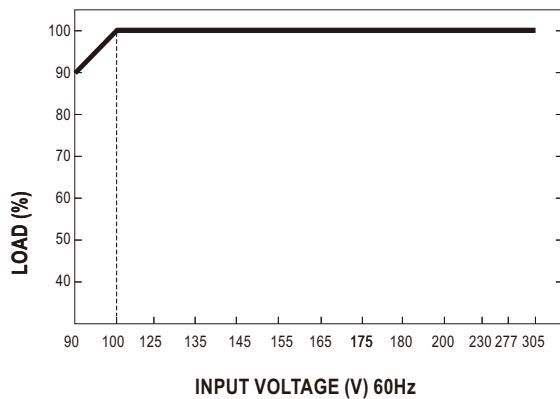

## ■ Function manual

### 1. Alarm signals

- (1) Alarm Signal is sent out through "AC fail" & "Battery low" & "Charger fail" pins via relay contact.
- (2) An external voltage source is required for this function. The maximum applied voltage is 30Vdc and the maximum sink current is 1A. Please refer to Fig 1.2.
- (3) Table 1.1 explains the alarm function built in the power supply

INPUT	AC fail		DC OK		Battery low/Abnormal /Disconnected		Charger fail	
	2-3	1-3	5-6	4-6	8-9	7-9	11-12	10-12
AC only	closed	open	closed	open	open	closed	-----	-----
AC + BAT.	closed	open	closed	open	closed	open	-----	-----
BAT. only	open	closed	closed	open	closed	open	-----	-----
Low BAT. (<30% capacity)	-----	-----	-----	-----	open	closed	-----	-----
Charger Fail	-----	-----	-----	-----	-----	-----	open	closed

Table 1.1 Explanation of alarm signal

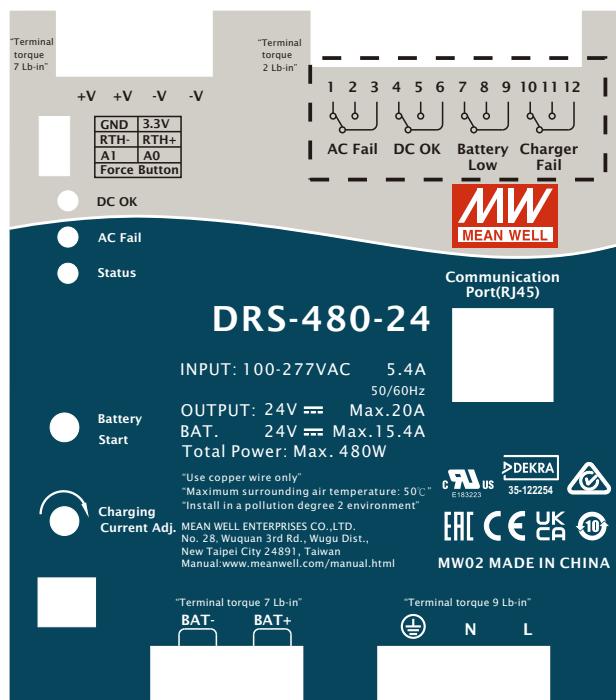


Fig 1.1 alarm signal Terminals

AC fail (Battery low)


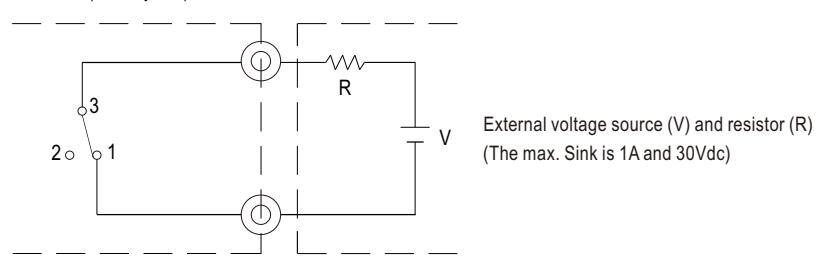


Fig 1.2 Internal circuit of AC fail (Battery low), via relay contact

## 2.DC-UPS function

When AC mains drops below:79~89VAC of 120VAC, 132~187VAC of 220VAC, UPS function will activate and power source switch battery backup.

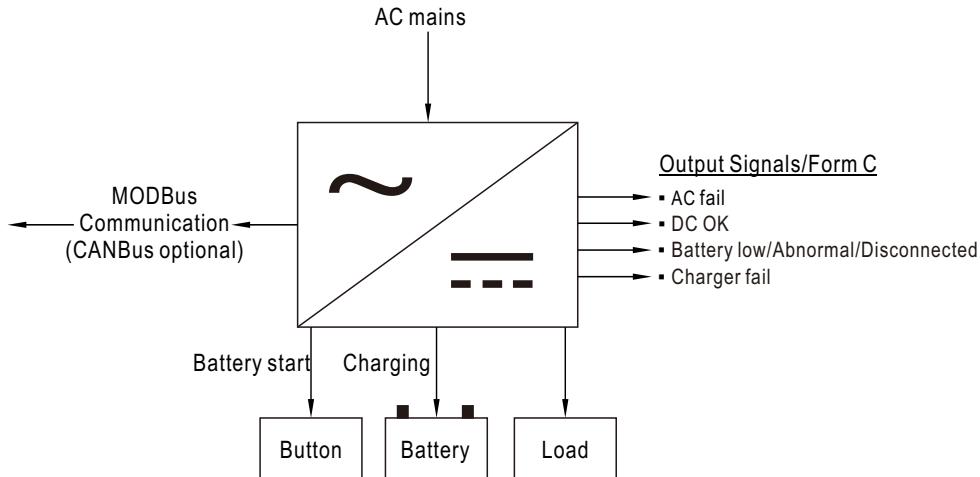


## 3.Charger setting

### 3.1.1 2 or 3-stage selectable by DIP S.W


※ This series provides 2 or 3 stage charging curve.

1	OFF: 3 stage(Default), ON: 2 stage
2	Charging curve adjustable:see below
3	

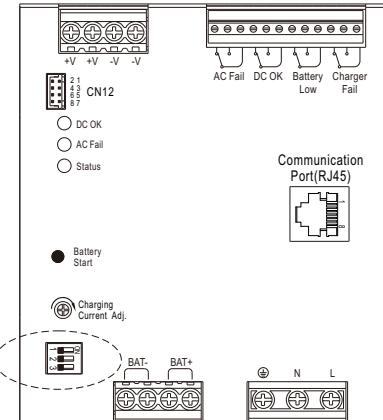


### 3.1.2 Charging curve can be adjustable by DIP S.W

#### ◎ 2 stage charging curve

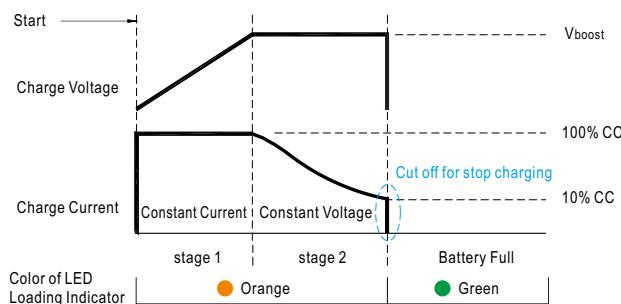

#### ◎ Default 3 stage charging curve

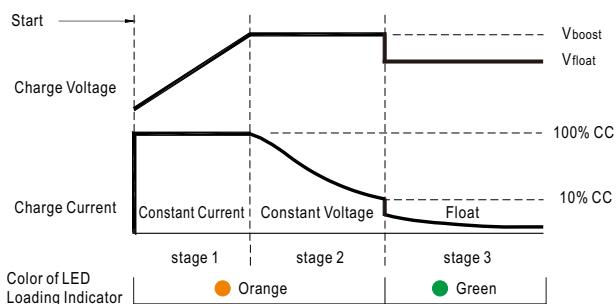

State	DRS-480-24	DRS-480-36	DRS-480-48
Constant Current	15.4A	10.2A	7.7A
Vboost	28.8V	43.2V	57.6V

State	DRS-480-24	DRS-480-36	DRS-480-48
Constant Current	15.4A	10.2A	7.7A
Vboost	28.8V	43.2V	57.6V
Vfloat	27.6V	41.4V	55.2V

◎ Suitable for lead-acid batteries (flooded, Gel and AGM) and Li-ion batteries (lithium iron and lithium manganese).

◎ Suitable for lead-acid batteries (flooded, Gel and AGM) and Li-ion batteries (lithium iron and lithium manganese).

※ The default curve is programmable, whereas other pre-defined curves can be activated by the means of the DIP S.W; please refer to the table below and the Mechanical Specification.

## ◎ Embedded 2 stage charging curve

DIP SW position		24V model		
2	3	Description	CC(default)	Vboost
OFF	OFF	Default, programmable	15.4A	28.8
ON	OFF	Pre-defined, gel batter		28.0
OFF	ON	Pre-defined, flooded battery		28.4
ON	ON	Pre-defined, AGM battery,LiFe04		29.2
DIP SW position		36V model		
2	3	Description	CC(default)	Vboost
OFF	OFF	Default, programmable	10.2A	43.2
ON	OFF	Pre-defined, gel battery		42
OFF	ON	Pre-defined, flooded battery		42.6
ON	ON	Pre-defined, AGM battery,LiFe04		43.8
DIP SW position		48V model		
2	3	Description	CC(default)	Vboost
OFF	OFF	Default, programmable	7.7A	57.6
ON	OFF	Pre-defined, gel battery		56.0
OFF	ON	Pre-defined, flooded battery		56.8
ON	ON	Pre-defined, AGM battery,LiFe04		58.4

## ◎ Embedded 3 stage charging curve

DIP SW position		24V model		
2	3	Description	CC(default)	Vboost
OFF	OFF	Default, programmable	15.4A	28.8
ON	OFF	Pre-defined, gel batter		28.0
OFF	ON	Pre-defined, flooded battery		28.4
ON	ON	Pre-defined, AGM battery,LiFe04		29.2
DIP SW position		36V model		
2	3	Description	CC(default)	Vboost
OFF	OFF	Default, programmable	10.2A	43.2
ON	OFF	Pre-defined, gel battery		42
OFF	ON	Pre-defined, flooded battery		42.6
ON	ON	Pre-defined, AGM battery,LiFe04		43.8
DIP SW position		48V model		
2	3	Description	CC(default)	Vboost
OFF	OFF	Default, programmable	7.7A	57.6
ON	OFF	Pre-defined, gel battery		56.0
OFF	ON	Pre-defined, flooded battery		56.8
ON	ON	Pre-defined, AGM battery,LiFe04		58.4

## 3.2 SBP-001 can adjust the charging curves (Only CANBus Model)

## ◎ 2 stage charging curve (programmable)

DIP SW position		24V model		
2	3	Description	CC(default)	Vboost
OFF	OFF	Default, programmable	15.4A	28.8
DIP SW position		36V model		
2	3	Description	CC(default)	Vboost
OFF	OFF	Default, programmable	10.2A	43.2
DIP SW position		48V model		
2	3	Description	CC(default)	Vboost
OFF	OFF	Default, programmable	7.7A	57.6


## ◎ 3 stage charging curve (programmable)

DIP SW position		24V model		
2	3	Description	CC(default)	Vboost
OFF	OFF	Default, programmable	15.4A	28.8
DIP SW position		36V model		
2	3	Description	CC(default)	Vfloat
OFF	OFF	Default, programmable	10.2A	43.2
DIP SW position		48V model		
2	3	Description	CC(default)	Vfloat
OFF	OFF	Default, programmable	7.7A	57.6

※ SBP-001 is a programmer, particularly for MEAN WELL's various programmable battery charger models to program the parameters of charging curves, such as the Constant current (CC), tapper current(TC), Constant voltage (CV), float voltage (FV) and so on, to accommodate the diversified battery specification in industry. With the design accounting for simplicity and convenience, users can easily configure MEAN WELL's programmable battery chargers with SBP-001 programmer and the computer; all of the setups are able to be finished easily by the means of the specific software.

Note:(1) Tapper current(TC) default is 10%, can be fine tuned from 2% to 30% by SBP-001 with computer or CANBus Interface.


(2) Please contact MEAN WELL for more details.

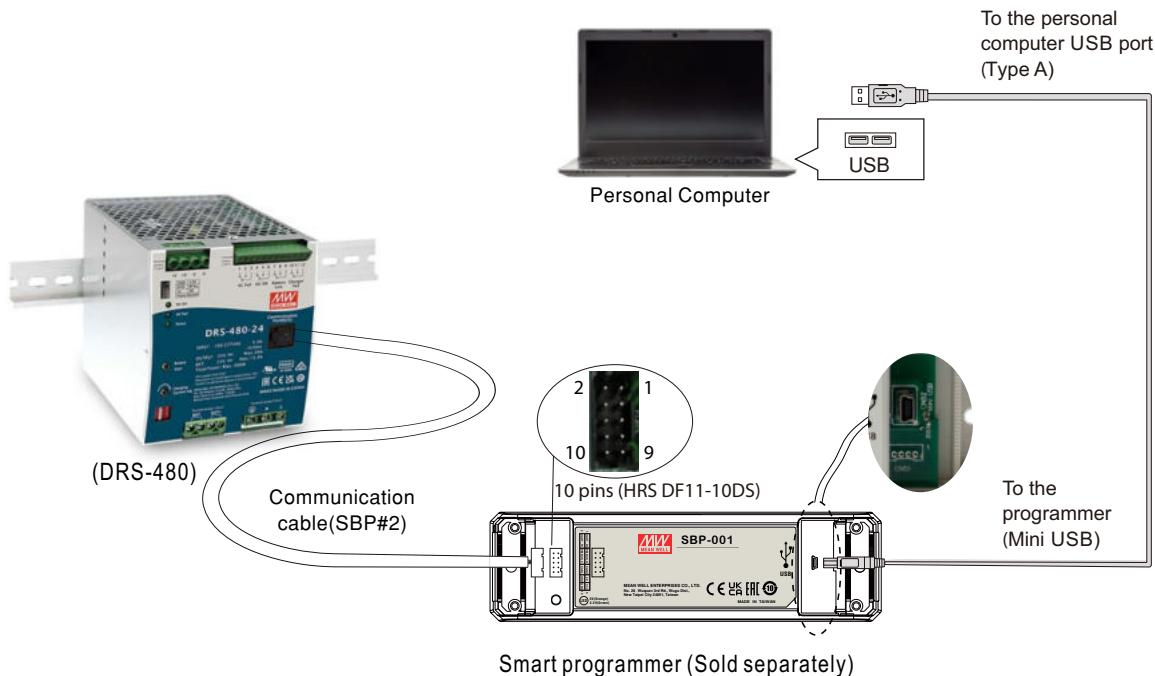

※ User Interface:



※ Communication cable for DRS series

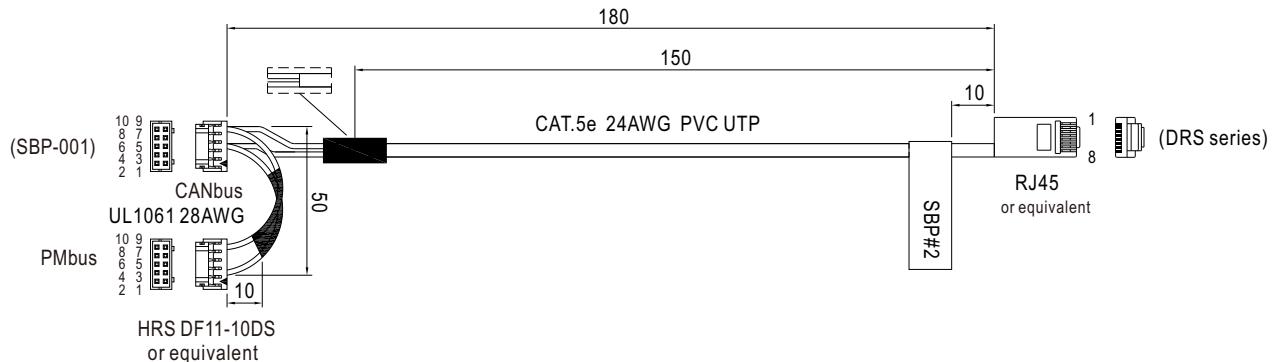

DRS series pin assignment :

Connector	Pin Assignment									
SBP-001 10pin connector (Connector part No.:HRS DF11-10DS) 	1	2	3	4	5 (CANH)	6 (CANL)	7	8	9	10 (GND)
DRS-480 RJ45 Communication port 	-----	-----	-----	-----	6	7	-----	-----	-----	8
Wire color	-----	-----	-----	-----	Green	White/Brown	-----	-----	-----	Brown


### 3.3 Communication interface

Charging parameters can be modified by MODBus (Built-in) or CANBus(optional) communication commands.  
For details, please refer to: <http://www.meanwell.com/manual.html>


### 4. Power Boost Mode

The maximum current on the load output is the 2 times the rated current for 4 minutes max. and 3 times the rated current for 4 seconds max.  
For example (48V model):

Output load

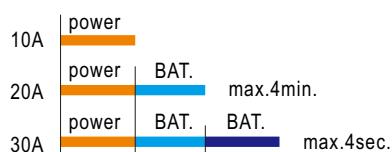

## 5.LED alarm

 Function		Description	Output of alarm
DC OK	DC fail	OFF	
	DC OK	Green	
AC fail	AC fail	Red	
	AC OK	OFF	
Status	Charging status	Float	Green 
		Charging: CC/CV	Orange 
	System diagnosis	Discharging	Orange: 1 Blink/Pause  
		Charger fail	Red: 1 Blink/Pause  
		Battery overvoltage / Battery reverse polarity	Red: 2 Blink/Pause  
		Battery low / No Battery	Red: 3 Blink/Pause  
		Battery discharge peak power timeout.	Red: 4 Blink/Pause  
		Over load / short	Red: 5 Blink/Pause  
		Over temperature	Red: 6 Blink/Pause  
		Timeout	Red: 7 Blink/Pause  

### ■ Suggested Application

#### 1. Backup connection for AC interruption

(1) Please refer to Fig2.1 for suggested connection.

The power supply charges the battery and provides energy to the load at the same time when AC mains is OK. The battery starts to supply power to the load when AC mains fails.

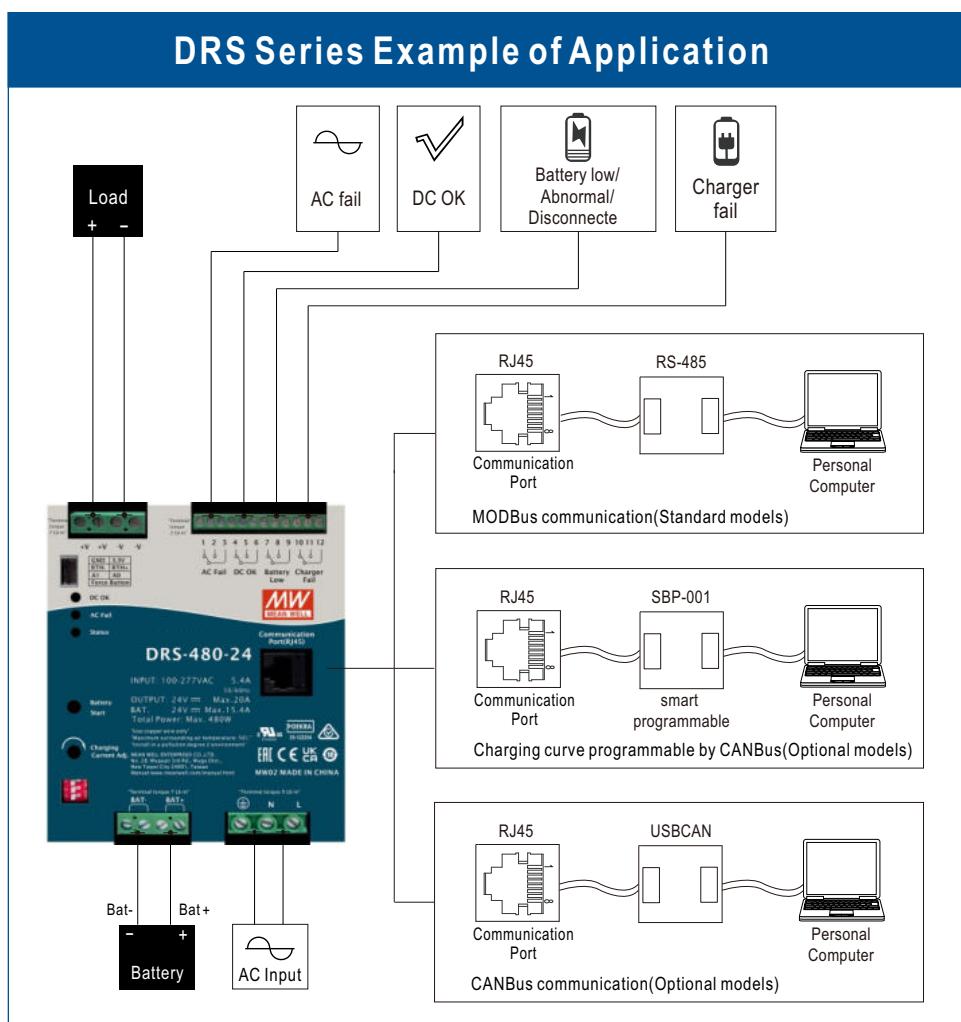


Fig 2.1 Suggested system connection

#### (2) Backup time


Backup time depends on:

- ※ from the load current
- ※ from the size of the batteries.

The following table is an example (battery capacity at C10 discharge rate).

Battery Load \ Load	10AH	20AH	50AH	100AH	200AH
1.5A	350min	13h	33h	67h	133h
3A	125min	350min	17h	33h	67h
5A	60min	180min	600min	20h	40h
7.5A	35min	90min	350min	13h	27h
10A	23min	60min	240min	10h	20h
15A	13min	35min	125min	350min	13h

## ■ Mechanical Specification

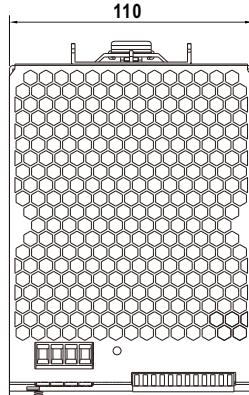




Case No. 214C Unit:mm

Terminal Pin No. Assignment (TB3)

Pin No.	Assignment
1,2	+V
3,4	-V

Terminal Pin No. Assignment (TB4)

Pin No.	Assignment
1,2,3	AC fail
4,5,6	DC OK
7,8,9	Battery low/ Abnormal/ Disconnected
10,11,12	Charger fail

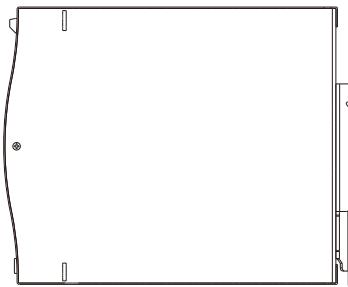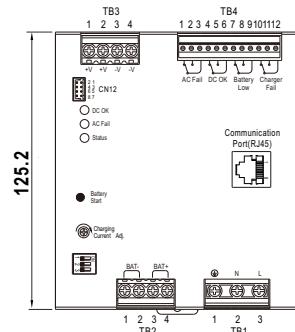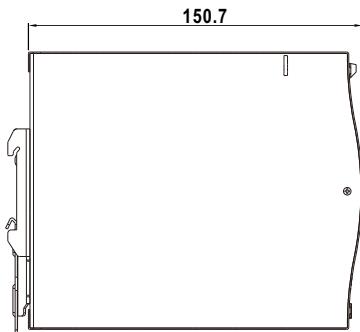


Terminal Pin No. Assignment (TB2)

Pin No.	Assignment
1,2	BAT.-
3,4	BAT. +


Terminal Pin No. Assignment (TB1)

Pin No.	Assignment
1	FG $\ominus$
2	AC/N
3	AC/L

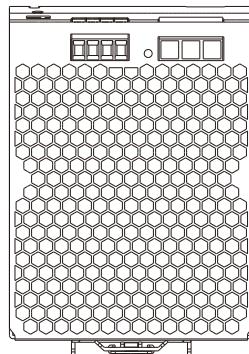 Force button Connector (CN12):  
JS-2008R-4\*2-T or equivalent


Terminal Pin No. Assignment (RJ45)

Pin No.	Function	Description
1,2,3,4,5	NC	Retain for future use.
6	Data+	For MODBus model:Serial Date used in the MODBus interface.
	CANH	For CANBus model:Date line used in the CANBus interface.
7	Data-	For MODBus model:Serial Clock used in the MODBus interface.
	CANL	For CANBus model:Date line used in the CANBus interface.
8	GND-AUX	Auxiliary voltage output GND. The signal return is isolated from the output terminals(+V & -V).

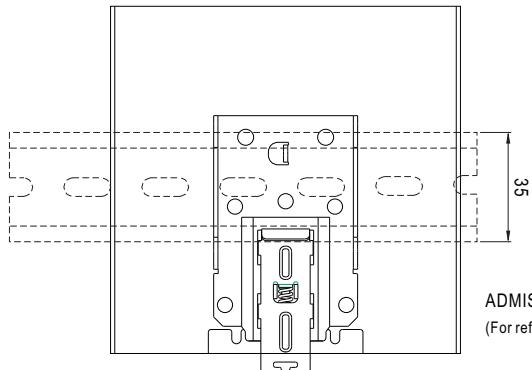**■ Installation Instruction**

Back View

This series fits DIN rail TS35/7.5 or TS35/15.  
For installation details, please refer to the Instruction manual.

ADMISSIBLE DIN rail:TS35/7.5 OR TS35/15  
(For reference only. Not included with unit.)

**■ Installation Manual**

Please refer to : <http://www.meanwell.com/manual.html>