

INSTRUCTIONS MANUAL

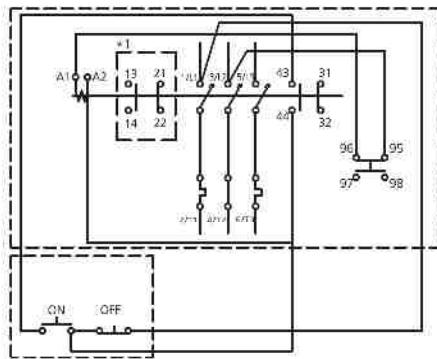
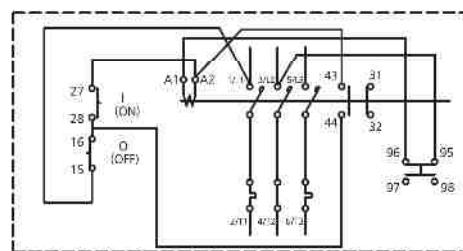
ENCLOSED STARTER

This manual should be given to the person who actually uses the products and is responsible for their maintenance.

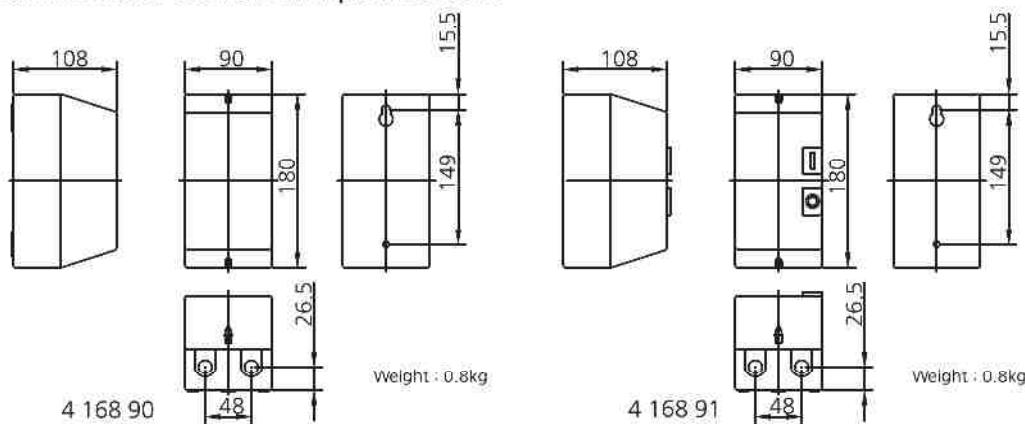
■ Devices & Ratings

TYPE	Devices combined		AC3 ratings(IEC60947-4)				Auxiliary contact (standard)
	Contactor	Overload	220~240V	380~440V	500~550V	690V	
4 168 90 / 91	CTX ³ 9A	RTX ³ 40 (0.1~22A)	2.5KW 11A	4KW 9A	4KW 7A	4KW 6A	1NO+1NC
	CTX ³ 12A		3.5KW 13A	5.5KW 12A	7.5KW 12A	7.5KW 9A	1NO+1NC
	CTX ³ 18A		4.5KW 18A	7.5KW 18A	7.5KW 13A	7.5KW 9A	1NO+1NC
	CTX ³ 22A		5.5KW 22A	11KW 22A	15KW 20A	15KW 18A	1NO+1NC

■ Wiring Diagram

CTX³ MOTOR STARTER (4 168 90)CTX³ MOTOR STARTER (4 168 91)

■ Mould enclosure for motor starters with push buttons



SAFETY PRECAUTIONS

Before installation, wiring, operation, maintenance and inspection of the device, be sure to read the warning message carefully for safety to ensure proper operations. Please keep the instructions, since they are very important.

WARNING : Incorrect handling of the device may result in death or serious injury.

CAUTION : Incorrect handling of the device may result in minor injury or physical damage.

WARNING

1. Turn off the upstream circuit breaker before installation or service to prevent electric shocks or service to prevent electric shocks and burns due to short circuit.
2. Do not touch any live naked terminals. It makes an electric shock.

