

ELKO EP, s.r.o.

Palackého 493 769 01 Holešov, Všetuly Czech Republic Tel.: +420 573 514 211 e-mail: elko@elkoep.com www.elkoep.com



02-14/2017 Rev.: 0


HRN-33 HRN-63 HRN-34 HRN-64 HRN-35 HRN-67 HRN-37

Monitoring voltage relay

Characteristics


- it serves to control supply voltage for appliances sensitive to supply tolerance, protection of the device against under / over voltage
- HRN-3x is band voltage relay, HRN-6x is over / under voltage relay. For difference see graph of function.
- HRN-33, HRN-63
- monitors voltage in range AC 48 276 V
- U max and U min can be monitored independently
- HRN-34, HRN-64
- like HRN-33, but voltage range is DC 6 30 V
- monitoring of battery circuits (12, 24 V)
- HRN-35
- like HRN-33, but independent output relays for each voltage level
- switching of other loads possible
- HRN-37, HRN-67
 - like HRN-33, monitors voltage in range AC 24 150 V
- it is possible to monitor level of overvoltage and undervoltage independently
- adjustable time delay for all types is 0 10 s (to eliminate short voltage drops or peaks)
- voltage Umin adjusted as % of Umax
- 3-state indication LEDs indicating normal state and 2 fault states
- supply from monitored voltage (monitors level of its own supply)
- 1-MODULE, DIN rail mounting

Description

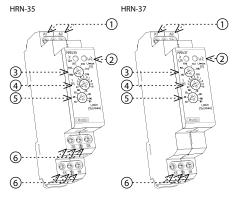


- 1. Supply / monitoring terminals
- 2. LED indication for relay status
- 3. Adjusting of upper value Umax
- 4. Adjusting of time delay
- 5. Adjusting of bottom value Umin
- 6. Output contatcs

Symbol

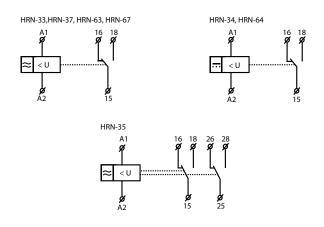

Connection

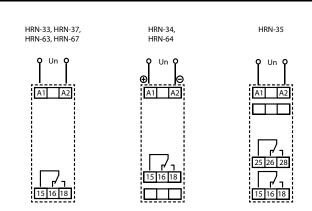

Type of load	 cos φ ≥ 0.95 AC1	—M— AC2	—(M)— AC3	=(]⊧ AC5a uncompensated	€ 425 AC5a compensated	HAL.230V D S	AC6a	 AC7b	— <u>—</u> AC12
Mat. contacts AgNi, contact 16A	250V / 16A	250V / 5A	250V / 3A	230V / 3A (690VA)	х	800W	х	250V / 3A	250V / 10A
Type of load	AC13	_ 	 \$\frac{1}{4} \cdot - \frac{1}{4} \cdot \	— <u>—</u>	—(M)—	M DC5	DC12	_ 	_
Mat. contacts AgNi, contact 16A	250V / 6A	250V / 6A	250V / 6A	24V / 16A	24V / 6A	24V / 4A	24V / 16A	24V / 2A	24V / 2A

	HRN-33 / HRN-63	HRN-34 / HRN-64	HRN -35	HRN-37 / HRN-67		
Supply and measuring						
Terminals:	A1 - A2					
Voltage range:	AC 48 - 276 V /		AC 48 - 276 V /	AC 24 - 150 V /		
	50 - 60 Hz	DC 6 - 30 V	50 - 60 Hz	50 - 60 Hz		
Power input:	AC max. 1.2 VA	DC max. 1.2 VA	AC max. 1.2 VA	AC max. 1.2 VA		
Upper level (Umax):	AC 160 - 276 V	DC 18 - 30 V	AC 160 - 276 V	AC 80 - 150 V		
Bottom level (Umin):	30 - 95 % Umax	35 - 95 % Umax	30 - 95 % Umax	30 - 95 % Umax		
Max. permanent:	AC 276 V	DC 36 V	AC 276 V	AC 276 V		
Peak overload < 1 ms:	AC 290 V	DC 50 V	AC 290 V	AC 290 V		
Time delay:	adjustable, 0 - 10 s					
Accuracy						
Setting accuracy (mech.):	5%					
Repeat accuracy:	<1%					
Dependance on temperature:	< 0.1 % / °C (°F)					
Tolerance of limit values:	5%					
Hysteresis (from fault to normal):	2 - 6 % of adjusted value (only HRN-33, HRN-34, HRN-35, HRN-37)					
Output						

Output							
Number of contacts:	1x changeover / SPDT (AgNi / Silver Alloy)	1x changeover / SPDT (AgNi / Silver Alloy)	1x chang. for each level of voltage, (AgNi)	1x changeover / SPDT (AgNi / Silver Alloy)			
Current rating:		16 A / AC1					
Breaking capacity:	4000 VA / AC1, 384 W / DC						
Inrush current:		30 A / < 3 s					
Switching voltage:	250 V AC1 / 24 V DC						
Output indication:	red / green LED						
Mechanical life:		3x10 ⁷					
Electrical life (AC1):		0.7x10 ⁵					

Other information

O tile illioillation						
Operating temperature:	-20 °C to 55 °C (-4 °F to 131 °F)					
Storage temperature:	-30 °C to 70 °C (-22 °F to 158 °F)					
Electrical strength:	4 kV (supply - output)					
Operating position:	any					
Mounting:	DIN rail EN 60715					
Protection degree:	IP40 from front panel, IP20 terminals					
Overvoltage cathegory:	III.					
Pollution degree:	2					
Max. cable size (mm²):	solid wire max. 1x 2.5 or 2x 1.5,					
	with sleeve max. 1x 2.5 (AWG 12)					
Dimensions:	90 x 17.6 x 64 mm (3.5″ x 0.7″ x 2.5″)					
Weight:	61 g (2.2 oz.)	73 g (2.6 oz.)	85 g (3 oz.)	61 g (2.2 oz.)		
Standards:	EN 60255-6, EN 61010-1					

Indication LFD

HRN-33, HRN-37



Normal state Umin<Un<Umax green LED = ON, red LED = OFF



xceeded Umax (overvoltage) Drop below Umin (undervoltage) Un>Umax or Un<Umax green LED = ON, red LED = ON



Normal state Umin<Un<Umax green LED = ON, red LED = OFF



xceeded Umax (overvoltage) Drop below Umin (undervoltage) Un>Umax or Un<Umax green LED = OFF red LED = ON

HRN-63, HRN-67



Exceeded Umax (overvoltage) Un>Umax green LED = ON, red LED = ON



Drop below Umin (undervoltage) Un<Umin green LED = ON, red LED = OFF



Exceeded Umax (overvoltage) Un>Umax green LED = OFF, red LED = ON



Drop below Umin (undervoltage) Un<Umin green LED = ON, red LED = OFF

HRN-35



Normal state Umin<Un<Umax green LED = ON, red LED = OFF




Exceeded Umax (overvoltage) Un>Umax green LED = ON, red LED = ON




Drop below Umin (undervoltage) Un<Umin green LED = OFF, red LED = ON



Function

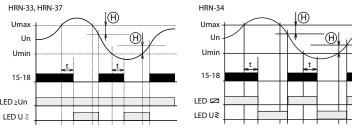

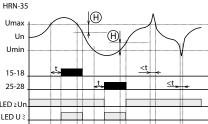

Legend:

Umax - upper adjustable level of voltage

Un - measured voltage

Umin - bottom adjustable level of voltage 15-18 - switching contact of output relay No.1

25-28 - switching contact of output relay No. 2 LED ≥ Un - green indicator light


LED ≥ U - red indicator light

LED U> - red indicator light

H - Hysteresis

Function HRN-33, 34, 35, 37:

Monitoring relay series HRN-3x monitores level of voltage in single - phase and DC circuits. Monitored voltage serves also as supply voltage. It is possible to set two independayt levels of voltage, when exceeded the output is activated. HRN-33, HRN-34 and HRN-37 - in normal $\,$ state the output relay is permanently switched. It switches off when there is a below or above deflection. This combination of connection of the output relay is advantageous when the full failure of supply (monitored) voltage is considered to be a faulty state in the same way as a decrease of voltage within the set level. Output relay is in both situations always switched off. Differently HRN-35 version uses independayt relay for each level, in normal state it is switched off. If the upper level is exceeded (for example overvoltage) 1 relay switches on, when the bottom level (e.g. undervoltage) is exceeded 2 relay switches. It is thus possible to see the particular faulty state. To eliminate short peaks in the main the time delay, which is possible to be set in range 0 - 10 s, is used. It functions when changing from normal to faulty state and prevents unavailing pulsation of the output relay caused by parasitive peaks. Time delay doesn't apply when changing from faulty to normal state, but hysteresis (1 - 6 % depends on the voltage setting) apply. Thanks to changeover contacts it is possible to get other configurations and functions according to actual requirements of the application.

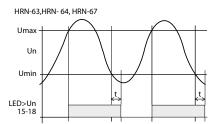

Function HRN-63, 64, 67:

Monitoring relay line HRN-6x serves to monitor levels of voltage in single-phase or DC circuits. Monitored voltage is in the same time also supply voltage. It is possible to set two independayt levels of voltage. When Umax is exceeded, output is activated. In case voltage level falls below Umin, output is deactivated. This combination is advantageous when full absence of supply voltage is understood as faulty state. as well as voltage drop in the frames of set level. To eliminate short voltage peaks in the main there is time delay which can be set in a range of 0 - 10 sec. Such delay applies in case of going from overvoltage to undervoltage. In case of returning from undervoltage to overvoltage this delay doesn't apply. Thanks to changeover output contacts it is possible to reach various configurations and functions according to requirements or an application.

Warning

Devices line HRN-3x and HRN-6x are constructed to be connected into 1-phase main or DC circuits (according to types, it is necessary to observe voltage ranges) and must be installed in accordance with regulations and standards applicable in a country of use. Installation, $connection, setting \ and \ servicing \ can \ be \ done \ only \ by \ a \ person \ with \ an \ adequate \ qualification$ who has read and perfectly understood this manual and function of the device. The device contains protections against over-voltage peaks and disturbances in the supply main. To assure correct function of these protections, there must be front-ended suitable protections of higher degree (A, B, C) and according to a standard switched devices (contactors, motors, inductive loads etc.) must be screened. before installing it is necessary to make sure that the device is not energized and main switch is in position OFF. Do not install device to sources of excessive electromagnetic disturbances. By correct installation of the device, ensure perfect air circulation so the maximal operational temperature of the device is not exceeded when operated 24 hours a day with higher ambient temperature. Use screwdriver width approx. 2 mm to install and set the device. Please keep in mind that it is a fully electronics device while mounting it. Correct function of the device is also depended on the type of transport, storing and handling. In case you notice any damage, deformation, malfunction or missing piece, do not install the device and claim it at the seller. The device can be dismounted, recycled or stored at protected dumping-place after its lifetime.