

LOAD BREAK SWITCH

IS 543569 - A
Instruction sheet
Novodislo za upravljanje
Upravljanje pri
iskrplivanju

CLBS - N - PE - 4P (100 - 125A)

Временско ločilno stikalo
TERETNA RASTAVNA SKLOPKA
Выключатель нагрузки




Edition 10/14 -
Ref.
IS 543569-A (534923-E)

543569 A

IS 543571
004661.405
004661.406

004661.431

004661.437
004661.438
004661.445

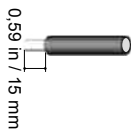

0.59 in / 15 mm

Hexagonal Metric Allen size 4
Imbuš ključ velikosti 4
Heksagonalni metakli Allen vel. 4


Шестигранный торцевой ключ размер 4

Wire Voltage Drop/Max. Torque N/mov. Moment

6 mm² 31 lb/in / 3.5 N/m
10 - 35 mm² 35.4 lb/in / 4 N/m
50 - 70 mm² 44.3 lb/in / 5 N/m






CONFIGURATION
Konfiguracija
КОНФИГУРАЦИЯ

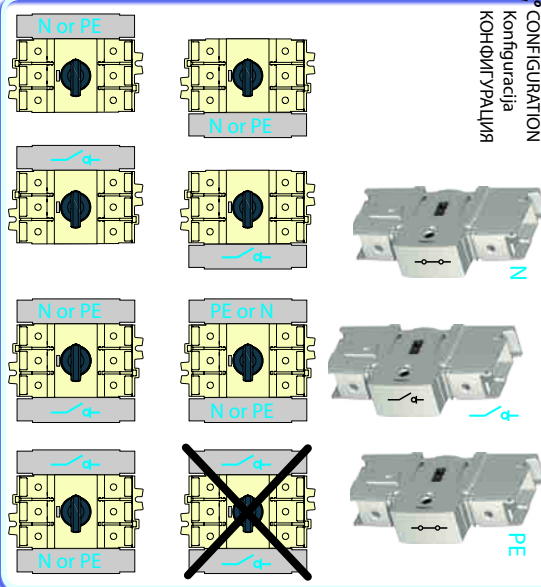

STEP 1

STEP 2

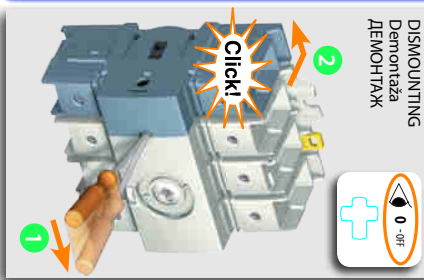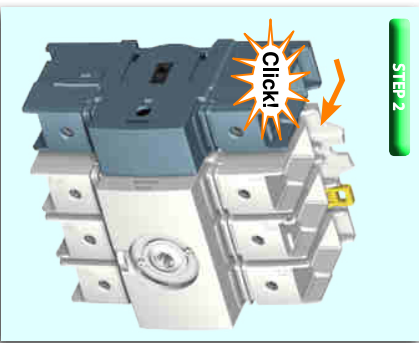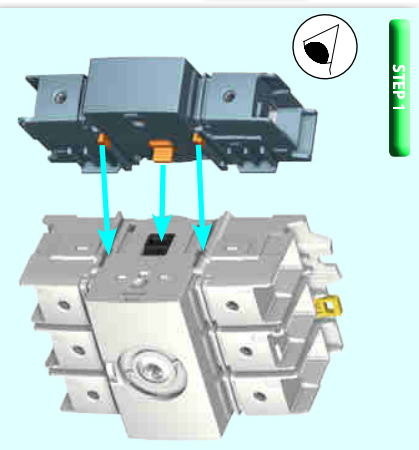

ETI

⚠ DANGER Опозорilo OPASNOST Предписанье

HAZARDOUS VOLTAGE. This equipment must be installed and serviced only by qualified electrical personnel. Turn off all power supplying this equipment before working on or inside equipment. Always use a properly rated voltage sensing device to confirm power is off. Replace all devices, doors, and covers before turning on power to this equipment. Failure to follow these instructions will result in death or serious injury.

NEVARNOST ELEKTRIČNEGA UDARA. To opremo lahko namešča in vzdržuje le strokovno usposobljena oseba. Pred postopkom montaže in vzdrževanju naprave je potrebno izklopiti električno napajanje in ga vključiti šele po zaključnem postopku. Z ustreznim napravo preverite odsotnost napajanja. Naprave, dele naprav in zaščitne pokrove menjajte in nameščajte le v brez napetostnem stanju. Neupoštevanje teh navodil lahko povzroči hude poškodbe ali smrt.

OPASNOST NAPONA. Ovu opremu smije instalirati i servisirati samo kvalificirano električarsko osoblje. Isključite svako napajanje ove opreme prije rada na unutrašnjosti ili vanjskim dijelovima opreme. Z ustreznim napravo provjerite odsotnost napajanja. Naprave, dele naprav in zaštitne pokrove menjajte in nameščajte le v brez napetostnem stanju. Ne pridržavanje ovih mjera može rezultirati smrtnim ishodom ili ozbiljnim povredama.

ОПАСНОЕ НАПРЯЖЕНИЕ. Монтаж и обслуживание данного оборудования, осуществляется только классифицированными и обученным персоналом. Отключите цепи питания данного оборудования перед началом работы с устройством. Всегда используйте исправный индикатор для подтверждения отсутствия напряжения питания. Перед подачей напряжения питания на данное оборудование установите все необходимые аксессуары. Несоблюдение этих инструкций может привести к серьезным травмам или даже летальному исходу.