

ELKO EP, s.r.o. Palackého 493 769 01 Holešov, Všetuly Czech Republic Tel.: +420 573 514 211 e-mail: elko@elkoep.com www.elkoep.com

02-209/2016 Rev.: 1



TEV-2 TEV-3


Thermostat

Characteristics


- single thermostat with possibility of temperature management in adjustable range (it is possible to modify this range or make a special one on request)
- it is used to regulate heating (or cooling) in demanding environments (outside, humidity, dustiness, etc.)
- thermostat is placed in water-proof box with IP65, which enables installation outside, with in-built sensor (included in the supply)
- TEV-2 control and indication elements are placed under transparent cover, TEV-3 control and indication elements are placed directly on the cover (for easy orientation and frequent change of temperature)
- thermostat status is indicated by LED (2 colours)
- function of monitoring sensor disconnection and short-circuit
- output changeover contact 16 A (AC1)

Description

TEV-2 - without cover

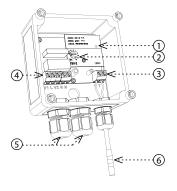


TEV-3 - cover

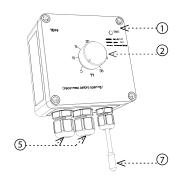


- 1. Device status indication
- 2. Temperature setting
- 3. Terminal for sensor
- 4. Terminals for connection of supply voltage and output contact
- 5. Sleeve for incoming cables
- 6. Sensor TZ-0
- 7. Sensor TC-0

Symbol




Connection

Function heating

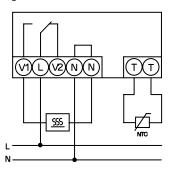

Function cooling

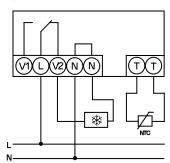

Type of load	————————————————————————————————————	—(M)— AC2	—(M)— AC3	≠[]‡ AC5a uncompensated	型量 和 AC5a compensated	HAL.230V DAC5b	AC6a	 AC7b	AC12
Mat. contacts AgNi, contact 16 A	250V / 16A	250V / 5A	250V / 3A	230V / 3A (690VA)	х	800W	х	250V / 3A	250V / 10A
Type of load	<u>∃</u> € } AC13	_ 	 	— <u>—</u> DC1	M DC3	M DC5	DC12	_ 	_
Mat. contacts AgNi, contact 16 A	250V / 6A	2501/64	2507/64	241//164	24V / 6A	241/ / 44	24V / 16A	24V / 2A	241//24

	TEV-2	TEV-3	
Function:	one-level thermostat		
Supply terminals:	L - N		
Supply voltage:	230 V AC / 50 - 60 Hz		
Input:	max. 2.5 VA		
Tolerance of supply voltage:	±15	i %	
Measured circuit			
Measuring terminals:	T-T		
Temperature ranges:	-20 to 20 °C / -4 to 68 °F	5 to 35 °C / 41 to 95 °F	
Hysteresis (sensitivity):	3 °C (± 1.5 °C) / (37.4 °F (± 34.7 °F))		
Sensor:	thermistor NTC 12 kΩ		
Faulty sensor indication:	red LED flashing		
Accuracy			
Accuracy of settings (mech.):	5 %		
Dependance on temperature:	< 0.1 % / °C		
Output			
Number of contacts:	1x changeover / SPDT (AgNi / Silver Alloy)		
Rated current:	16 A / AC1		
Switching output:	4000 VA / AC1; 384 W / DC		
Peak current:	30 A / < 3 s		
Switched voltage:	250 V AC1 / 24 V DC		
Output indication:	red LED		
Mechanical life:	3x10 ⁷		
Electrical life:	0.7x10⁵		
Other information			
Operation temperature:	-30 to +50 °C (-22 to 122°F)		
Operation position:	any		
Protection degree:	IP65 assembly		
Overvoltage cathegory:	III.		
Pollution level:	2		
Max. cable size (mm²):	solid wire 2.5 / with sleeve 1.5 (AWG 12)		
Dimensions:	110 x 135 x 66 mm (4.33″x 5.3″x 2.6″)		
Weight:	266 g (9.38 oz.)	277 g (9.77 oz.)	
Standards:	EN 60730-2-9	9, EN 61010-1	

Temperature sensor


	TZ-0	TC-0
Range:	-40°C to +125°C (-40°F to 257°F)	0 °C to +70 °C (32 °F to 158 °F)
Scanning element:	NTC 12K 5 %	NTC 12K 5 %
In air / in water:	(τ65) 62 s / 8 s	(τ65) 92 s / 23 s
In air / in water:	(τ95) 216 s / 23 s	(τ95) 306 s / 56 s
Cable material:		High temperature
	Silicone	PVC
Terminal material:		High temperature
	Nickel plated copper	PVC
Protection degree:	IP67	IP67
Length:	110 mm (4.3")	100 mm (3.9")
Weight:	4.5 g (0.16 oz.)	5 g (0.17 oz)

 τ 65 (95): time, which sensor needs to heat up on 65 (95) % of ambient temperature of environment, in which is located.

Resistive values of sensors in dependance on temperature

nesisting raines of sensors in dependence on temperature				
Temperature (°C / °F)	Sensor NTC (kΩ)			
20 / 68	14.7			
30 / 86	9.8			
40 / 104	6.6			
50 / 122	4.6			
60 / 140	3.2			
70 / 158	2.3			

Tolerance of sensor NTC 12 k Ω is \pm 5% by 25 °C / 77 °F.

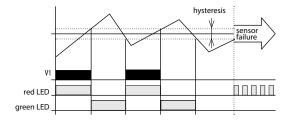

TEV-2 and TEV-3 are universal single thermostats for universal use. In case ambient temperature is higher than set temperature relay is open (function HEATING), for cooling function (opposite function) is possible to use NC contact of relay (V2).

Warning

The device is constructed to be connected into 1-phase main and must be installed in accordance with regulations and norms applicable in a particular country. Installation, connection and setting can be done only by a person with an adequate electro-technical qualification which has read and understood this instruction manual and product functions. The device contains protections against over-voltage peaks and disturbing elements in the supply main. Too ensure correct function of these protection elements it is necessary to front-end other protective elements of higher degree (A, B, C) and screening of disturbances of switched devices (contactors, motors, inductive load etc.) as it is stated in a standard. Before you start with installation, make sure that the device is not energized and that the main switch is OFF. Do not install the device to the sources of excessive electromagnetic disturbances. By correct installation, ensure good air circulation so the maximal allowed operational temperature is not exceeded in case of permanent operation and higher ambient temperature. While installing the device use screwdriver width approx. 2 mm. Keep in mind that this device is fully electronic while installing. Correct function of the device is also depended on transportation, storing and handling. In case you notice any signs of damage, deformation, malfunction or missing piece, do not install this device and claim it at the seller. After operational life treat the product as electronic waste.