

## 87045 LIMOGES Cedex

Phone: +33 (0) 5 55 06 87 87 - Fax: +33 (0) 5 55 06 88 88

# Movable mini-column : Roll & plug column (Export range)

Number(s): 6 530 29 - 980985



CONTENTS	Pages
1. Description & Composition	1
2. Installation	1
3. Dimensions	1
4. Electrical Specifications	1
5. Technical characteristics and standards	2
6. Material characteristics	2
7. Corian	3 & 6
8. Spare parts	7

## 1. DESCRIPTION & COMPOSITION

Movable mini-column consists of :


- Snap-on body 2 compartments 2 sides
- 7 x 2 P+E German standard socket outlets
- 4 Normaclips accessories
- 4 meters of cable type H05VVF 3G1,52
- 1 double USB charging socket 2400Ma
- Covers of de 45 mm size
- Caps
- Metal foot white colour (6 kg) equiped with 4 wheels and 4 cable storage
- Table white finish Corian©
- Screws
- Earth link

# 2. INSTALLATION

Roll and plug column is suitable for putting on one video projector, one laptop (maximum weight 20 kg) Equiped with wheels, this mini-column is easily movable. Installation place: meeting rooms, conference rooms, offices, etc.

The foot is especially designed in order that the mini-column can be the nearest possible from the office desk.



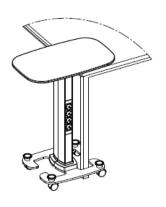

## 3. DIMENSIONS (MM)

Complete: H = 750 L = 580 I = 360

Table: 580 x 360 x 12 Foot: 400 x 360 x 10

## 4. ELECTRICAL SPECIFICATIONS

Voltage: 250 V (maxi permissible voltage)

Current :: 16 A

Frequency: 50 Hz Alternating Current

# Movable mini-column : Roll & plug column

# **5.TECHNICAL CHARACTERISTICS AND STANDARDS**

Classifications: EN 50085-1 et EN 50085-2-4

Cable trunking systems and cable ducting systems for electrical installations

6.2 Resistance to impact for installation and application	2J		
6.3 Minimum storage and transport temperature	-25°C		
6.3 Minimum installation and application temperature	-5°C		
6.3 Maximum application temperature	60°C		
6.4 Resistance to flame propagation	Non-flame propagating		
6.5 Electrical continuity characteristic	Yes		
6.6 Electrical insulating characteristic	without electrical insulating characteristic		
6.7 Degrees of protection provided by enclosure	IP10		
6.9 The system access cover retention	With a tool		
6.101 Floor treatment	dry-treatment of floor		
6.102 resistance to vertical load	Non applicable		
Electrical impedance	5mΩ/m		
Transversal section	Cordon 3 G1,5		
Protection against mechanical impact	IK07		

## Others characteristics

RoHS material	European directive 2002/95/CE : 27/01/2003		
Product Environmental Profile : available	PEP sheet		
Coating	International standard DIN EN ISO846		

## 6. MATERIAL CHARACTERISTICS

Technical data sheet: F02558EN/03

Body and covers	Anodised aluminium	
Caps	ABS	
Foot	Steel painted	
Table	Corian© (see § 6.1)	
Wheels	Plastic	
Cable storage	Alu	
Plates	Steel	
Packagings	Cardboard	

Updated: 20/08/2020

Created: 12/02/2018

Number(s): 6 530 29 - 980985

### 7. CORIAN

### 6.1. Characteristics



# Short Form Classification Report No. 16893B

## PRODUCT

**DuPont Corian® Solid Surface** 

#### SPONSOR

DuPont De Nemours (Belgium) BVBA

## PRODUCT DETAILS

- Thickness: Between 6 mm and 12.3 mm (± 0.7 mm)
- Density: Between 1645 kg/m³ and 1770 kg/m³
- Colour/pattern: Any colour variation allowed
- Use of fire retardants: No
- Product composition: No variation allowed
- Product construction: No variation allowed

## FIELD OF APPLICATION

- Construction applications used over any substrate with a density equal to or greater than 800 kg/m³, having a minimum thickness of 12.5 mm and a fire performance of A2 or better.
- Product installed utilizing Corian® silicone sealant only

## CLASSIFICATION

C-s1,d0

## STANDARDS

Test standards: EN ISO 11925-2:2002 & EN 13823:2002

Classification standard: EN 13501-1-2007


SIGNED BY

Delaum

Niek De Pauw (Signature) Project assistant Ghent

2016.06.14 13:22:00 +02'00'

APPROVED BY



For and on behalf of WFRGENT nv

This short form classification report has been drafted according to EGOLF agreement EGA 08rev2:2013 "Application note: clause 5.10 [5.10/1] — Types of test reports used in fire testing". Whilst the test data and classification provided within this short form report was obtained in a test conducted fully in accordance with the standards EN ISO 11+25-2:2002, EN 13823:2002 and EN 13501-1:2007, the presentation of the results in this short form report may not satisfy the requirements of those standards and EN ISO/IEC 17025:2005/AC:2006. The presentation of the results in this manner is made by agreement with the sponsor and use of the information herein for product assessment, approval or certification purposes will be restricted.

The full classification report No.185122 (Issue 4) is available at DuPont De Nemours (Belgium) BVBA.

This document is the original version of this report and is written in English. This document may be used only literally and completely for publications. For publications of certain texts, in which this document is mentioned, our permission must be obtained in advance. The authenticity of the electronic signatures is assured by Belgium Root CA.



Technical data sheet: F02558EN/03

WFRGENT NV - Ottergemsesteenweg-Zuid 711 - B-9000 Cent - België t: +32 9 243 77 50 - f: +32 9 243 77 51 - e: info@wfrgent.com BTW/NAT/TVA: BE0870.418.414 - Ondememingsnummer: RPR CENT 0870.418.414

WFRGENT NV is een spin-offbodrijf van de Universitei Gent, voorheen Laboratorium voor Aamvonding der Brandstoffen en Warmteoverdracht - Addeling Brandsveligheid WFRGENT NV is a spin-off company from the University of Ghent, previously the Laboratory for Heat Transfer and Fuel Technology - Fire Safety Division WFRGENT SA est une compagnie spin-off de l'Université de Gand, autrefois le Laboratoire pour l'Emplos des Combustibles et la Transmission de la Chaleur - Division Sécurité Incendie

## 7. CORIAN (CONT.)

## 6.2 Cleaning



# Caring for DuPont™ Corian®

Pleje af DuPont™ Corian®

Pflegehinweise für DuPont™ Corian®

Uso y cuidado de DuPont™ Corian®

Entretien des produits DuPont™ Corian®

Cura dei materiali DuPont™ Corian®

Onderhoud van DuPont™ Corian®

Vedlikehold av DuPont™ Corian®

Wskazówki dotyczące użytkowania i konserwacji materiału DuPont™ Corian®

Skötsel av DuPont™ Corian®

DuPont™ Corian® 'ın Bakımı

Φροντίδα του DuPont™ Corian®

Уход за поверхностями DuPont™Corian®







# Movable mini-column: Roll & plug column

Number(s): 6 530 29 - 980985

## 7. CORIAN (CONT.)

#### 7.2 Cleaning



# Caring for DuPont™ Corian®

DuPont™ Corian\* was created for a lifetime of easy care. Just follow the simple guidelines listed here to help keep your Corian\* surfaces looking beautiful.

## Routine care of your Corian® surface

For everyday cleaning, use soapy water or widely available surface cleaners.

Remove excess detergent with a soft cloth, rinse surface with warm water and dry with a soft cloth.

If necessary use a microfibre cloth and rub over the surface with an ammonia based cleaner, then rinse with water. This procedure will remove most dirt and residue from your Corian\* surfaces.

Always clean using a circular motion, from the front to the back, then side to side, overlapping the circles until the entire area has been cleaned. Do not use abrasive or mild abrasive cleaners on high gloss or dark surfaces.

Be aware that limescale can build up if water is left to dry on the surface. To prevent this, it is important to wipe the surface completely dry with a microfibre cloth after spills and cleaning. Some colours of Corian\* may require more frequent cleaning to maintain a uniform finish.

## Special care for stubborn stains

Residues from stubborn stains may require heavier cleaning.

Follow the recommendations below to clean these specific stains from your Corian\* surface and shapes effectively.

Vinegar, coffee, tea, lemon juice, vegetable juice, dyes, ketchup, lily pollen, saffron, light scratches, cigarette burns, shoe polish, ink, marker pen, iodine, mildew, mercurochrome, blood, red wine, perfume: Use a damp microfibre cloth and a mild abrasive cleaning product (except on high gloss or dark surfaces).

Grease, fat and oil residues: Use a microfibre cloth and rub over the stain with some diluted bleach. Rinse several times with warm water and dry with a soft cloth.

Bleach can discolour DuPont™ Corian\* if not removed completely by rinsing with water afterwards.

Hard water scale, soap, minerals: Use a microfibre cloth and rub over the stain with a standard household limescale remover or vinegar and leave for 2-4 minutes.

Using a second clean microfibre cloth, rinse the area thoroughly with water.

Nail varnish spills: Use a microfibre cloth and rub over the stain with a non-acetone based nail varnish remover. Rinse several times with warm water and dry with a soft cloth.

If the stain is still visible, repeat the operation, this time using very fine-grain sanding paper; If the stain persists, contact our Warranty Centre.

## How to prevent permanent damage

Be sure to follow these guidelines to help prevent permanent damage to your Corian\* installation.

Avoid getting strong chemicals - eg paint removers, oven cleaners, acid drain cleaners, acetone based nail varnish removers etc - on your surface. If a spill does occur, promptly flush the surface with water to fully rinse off the chemical.

Do not clean using aggressive chemical agents such as acetone, oven cleaners, thinners, strong acids (muriatic acid etc) or strong bases (caustic soda etc), or industrial detergents or paint solvents.

If a spill does occur, promptly flush the surface with water to fully rinse off the chemical.

Do not use metal scrapers, iron brushes or other domestic metal tools to remove stains, paints, plaster or other substances.

In the case of severe damage, please contact the DuPont™ Corian® Warranty Centre, which will put you in touch with a local DuPont™ Corian\* Quality Network Industrial Partner or Service Centre for professional re-sanding or repairing of your DuPont™ Corian\* installation. DuPont™ Corian\* Quality Network Service Centres are certified by DuPont to carry out expert repair and finishing work. They can also handle installation work and offer maintenance contracts to commercial customers to maintain DuPont™ Corian® installations in prime condition.

## Kitchen applications

## SPECIAL CARE FOR SINKS

Remove all the fat and oil residues resulting from food preparation from the sink, using a detergent or surface cleaner. If necessary, use a mild abrasive cleaning pad or sponge. Fill the sink with diluted household bleach (25% bleach and 75% water) and leave for ½ hour. Afterwards, rinse

thoroughly - you should have a beautifully clean sink, with very little effort.

# Movable mini-column : Roll & plug column

Number(s): 6 530 29 - 980985

## 7. CORIAN (CONT.)

## 7.2 Cleaning

ENGLISH

#### PREVENTING HEAT AND OTHER DAMAGE

It is important to minimise direct heat exposure to protect your Corian\* surface. Always use a heat protection pad, trivet (with rubber feet) or protective sink mat for hot cookware, or leave cookware to cool on the hob first. Never put hot pans, particularly cast iron pans, directly onto a DuPont™ Corian\* top or in a Corian\* sink. Always use the correct size pan on the hob and place it centrally on the ring.

An overhanging pan can scorch the surrounding surface.

As with most sinks, pouring boiling liquids directly into a DuPont™ Corian® sink without running cold water at the same time may damage the material. If you have an instant boiling water tap, a container should always be used to collect the water as boiling water from this type of tap may cause surface damage in and around the sink. Do not cut directly on Corian® surfaces. Use a chopping board.

## Bathroom applications

## DAILY MAINTENANCE OF WASH BASINS, SHOWER TRAYS AND BATHTUBS

Simply clean the surface with soapy water or any common detergent in order to remove most of the stains and dirt that may be deposited. Gel or creamy detergents are particularly recommended, together with a mild abrasive cleaning pad or sponge, ensuring that you rinse the treated area properly.

By doing this, the original matt finish will be maintained. Some substances such as ink, cosmetics and dyes may release colour onto the surface after extended contact with the surface.

All of these can easily be removed by following the special instructions for stubborn stains.

#### ATTENTION

Shower trays and bathtubs cannot be used autonomously by people with reduced motor skills, or with sensory and/or cognitive impairments (including children).

For your personal safety, use them at a maximum water temperature of 40°C.

Avoid using them in the vicinity or while using electrical appliances.

Pay special attention when using shower trays and bathtubs alone or after taking medicines.

## **Guaranteed Quality**

Technical data sheet: F02558EN/03

With proper care, your Corian\* surface will stay looking like new. Your DuPont™ Corian\* surface carries a Limited Installed Warranty when fabrication and installation are carried out by a Corian\* Industrial Partner and member of the Corian\* Quality Network. If you decide to sell your home, your warranty is transferable to the new owners. For complete details, go to our website (www.corian.com) to review the warranty guidelines applicable for your product.

This information is based on technical data that E. 1. du Pont de Nemours and Company and its affiliates ("DuPont") believe to be reliable, and is intended for use by persons having technical skill and at their own discretion and risk. DuPont cannot and does not warrant that this information is absolutely current or accurate, although every effort is made to ensure that it is kept as current and accurate as possible. Because conditions of use are outside DuPont's control, DuPont makes no representations or warranties, express or implied, with respect to the information, or any part thereof, including any warranties of title, non-infringement of copyright or patent rights of others, merchantability, or fitness or suitability for any purpose and assumes no liability or responsibility for the accuracy, completeness, or usefulness of any information. This information should not be relied upon to create specifications, designs, or installation guidelines. The persons responsible for the use and handling of the product are responsible for ensuring the design, fabrication, or installation methods and process present no health or safety hazards. Do not attempt to perform specification, design, fabrication, or installation methods and process present no health or safety hazards. Do not attempt to perform specification, design, fabrication, or installation work without proper training or without the proper personal protection equipment. Nothing herein is to be taken as a license to operate under or a recommendation to infringe any patents. DuPont shall have no liability for the use of or results obtained from such information, whether or not based on DuPont's negligence. DuPont shall not be liable for (i) any damages, including claims relating to the specification, design, fabrication, installation, or combination of this product with any other product(s), and (ii) special, direct, indirect or consequential damages. DuPont reserves the right to make changes to this information and to this disclaimer. DuPont encourages yo



Updated: 20/08/2020

Created: 12/02/2018

# Movable mini-column : Roll & plug column

# 8. SPARE PARTS

Roll & Plug		PIECES DETACHEES g Capot		Capot	
	2 cpt	6 530 29	980985		