



15KW 3  $\phi$  4W Input With High Voltage Output

**RST-15K-HV** series

#### Dimension

L	*	W	*	H
540	*	424	*	83.5(2U) mm
21.3	*	16.7	*	3.29(2U) inch



Front



Back



#### ■ Features

- 3  $\phi$  3-wire /  $\Delta$ 196~305VAC or 3  $\phi$  4-wire / Y 340~530VAC
- High efficiency up to 94%
- Forced air cooling
- Output voltage and constant current level programmable
- Wide voltage adjustment range 1~120%
- Active current sharing up to 2 units(28.5KW)
- Built-in remote ON-OFF control / Alarm signal
- Protections: Short circuit / Overload / Over voltage / Over temperature / Fan fail
- 5 years warranty

#### ■ Applications

- Energy & power system
- U.V or laser diode application
- Electrolysis system
- Factory control or automation apparatus
- Burn-in facility
- RF application
- EV charging station

#### ■ GTIN CODE


MW Search: <https://www.meanwell.com/serviceGTIN.aspx>

#### ■ Description

RST-15K-HV is a 15KW 3  $\phi$  input enclosed type AC/DC power supply. This series operates for the wide range three phase AC input and offers the models with the high voltage DC output(115V/230V/380V) that mostly demanded from the industry. This series provides models with forced air cooling, that can be working at ambient temperature up to 70°C. Moreover, RST-15K-HV provides vast design flexibility by equipping various built-in functions such as the output programming, active current sharing, remote ON-OFF control, alarm signals.....etc.

#### ■ Model Encoding


**RST - 15K - 115**

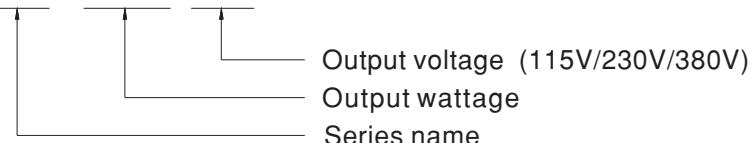


## SPECIFICATION

MODEL	RST-15K-115	RST-15K-230	RST-15K-380	
OUTPUT	<b>DC VOLTAGE (factory default)</b> 115V	230V	380V	
	<b>CURRENT (factory default)</b> 130A	64.8A	39.55A	
	<b>CURRENT RANGE</b> 0 ~ 130A	0 ~ 69A	0 ~ 45A	
	<b>RATED POWER</b> 14950W	14904W	15030W	
	<b>FULL POWER VOLTAGE RANGE</b> 115 ~ 138V	216 ~ 260V	334 ~ 400V	
	<b>RIPPLE &amp; NOISE (max.) Note.2</b> 1Vp-p	2Vp-p	4Vp-p	
	<b>VOLTAGE ADJ. RANGE</b> 90 ~ 138V Can be adjusted via built-in potentiometer	170 ~ 260V	260 ~ 400V	
	<b>VOLTAGE TOLERANCE Note.3</b> $\pm 1.0\%$	$\pm 1.0\%$	$\pm 1.0\%$	
	<b>LINE REGULATION</b> $\pm 0.5\%$	$\pm 0.5\%$	$\pm 0.5\%$	
	<b>LOAD REGULATION</b> $\pm 0.5\%$	$\pm 0.5\%$	$\pm 0.5\%$	
	<b>SETUP, RISE TIME</b> 3000ms, 200ms at full load			
INPUT	<b>HOLD UP TIME (Typ.)</b> 16ms 230VAC/400VAC at 75% load	10ms / 230VAC/400VAC at full load		
	<b>VOLTAGE RANGE</b> 3 $\phi$ 3W/ $\Delta$ 196~305VAC or 3 $\phi$ 4W/Y 340~530VAC			
	<b>FREQUENCY RANGE</b> 47 ~ 63Hz			
	<b>POWER FACTOR (Typ.)</b> $\geq 0.98/230VAC(400VAC)/\geq 0.97/277VAC(480VAC)$ at full load			
	<b>EFFICIENCY (Typ.) Note.8</b> 93%	94%	94%	
	<b>AC CURRENT (Typ.)</b> 45A/230VAC(3 $\phi$ 3-wire / $\Delta$ )	26A/230VAC(3 $\phi$ 4-wire / Y)		
	<b>INRUSH CURRENT (Typ.)</b> 150A/230VAC(3 $\phi$ 3-wire / $\Delta$ )	100A/230VAC(3 $\phi$ 4-wire / Y)		
PROTECTION	<b>LEAKAGE CURRENT</b> <3.5mA/Y 530VAC <21mA / $\Delta$ 305VAC			
	<b>OVERLOAD</b>	100 ~ 107% of rated current Protection type : Constant current limiting, unit will shutdown after 5 sec. re-power on to recover		
	<b>OVER VOLTAGE</b>	145 ~ 166V Protection type : Shut down o/p voltage, re-power on to recover	273 ~ 312V 420 ~ 480V	
FUNCTION	<b>OVER TEMPERATURE</b>	Shut down o/p voltage, recovers automatically after temperature goes down		
	<b>CURRENT SHARING</b>	Up to 2 units. Please refer to the Function Manual		
	<b>OUTPUT VOLTAGE PROGRAMMABLE</b>	Adjustment of output voltage is allowable between 1 ~ 120% of nominal output voltage. Please refer to the PV curve Function Manual		
	<b>CONSTANT CURRENT LEVEL PROGRAMMABLE</b>	Adjustment of constant current level is allowable between 20 ~ 100% of rated current. Please refer to the Function Manual		
ENVIRONMENT	<b>REMOTE ON-OFF CONTROL</b>	Please refer to the Function Manual		
	<b>ALARM SIGNAL OUTPUT</b>	AC fail, DC OK, fan fail, OTP. Please refer to the Function Manual.		
	<b>WORKING TEMP.</b>	-30 ~ +70°C (Refer to "Derating Curve")		
	<b>WORKING HUMIDITY</b>	20 ~ 90% RH non-condensing		
	<b>STORAGE TEMP., HUMIDITY</b>	-40 ~ +85°C, 10 ~ 95% RH non-condensing		
SAFETY & EMC (Note 7,9)	<b>TEMP. COEFFICIENT</b>	$\pm 0.03\%/\text{°C}$ (0 ~ 45°C)		
	<b>VIBRATION</b>	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes		
	<b>SAFETY STANDARDS</b>	UL62368-1, CAN/CSA C22.2 No. 62368-1, TUV BS EN/EN62368-1, EAC TP TC 004 approved		
	<b>WITHSTAND VOLTAGE Note.4</b>	I/P-O/P:4.3KVDC I/P-FG:2.8KVDC O/P-FG:2.8KVDC		
	<b>ISOLATION RESISTANCE Note.4</b>	I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500VDC / 25°C / 70% RH		
	<b>EMC EMISSION</b>	<b>Parameter</b>	<b>Standard</b>	<b>Test Level / Note</b>
		Conducted	BS EN/EN55032 (CISPR32) / BS EN/EN55011 (CISPR11)	Class B
		Radiated	BS EN/EN55032 (CISPR32) / BS EN/EN55011 (CISPR11)	Class A
		Harmonic Current	BS EN/EN61000-3-12	-----
	<b>EMC IMMUNITY</b>	Voltage Flicker	BS EN/EN61000-3-3	-----
		BS EN/EN55024 , BS EN/EN61204-3, BS EN/EN61000-6-2		
		<b>Parameter</b>	<b>Standard</b>	<b>Test Level / Note</b>
		ESD	BS EN/EN61000-4-2	Level 3, 8KV air ; Level 2, 4KV contact
		Radiated	BS EN/EN61000-4-3	Level 3
		EFT / Burst	BS EN/EN61000-4-4	Level 3
		Surge	BS EN/EN61000-4-5	Level 4, 4KV/Line-Earth ; Level 3, 2KV/Line-Line
OTHERS	<b>Conducted</b>	BS EN/EN61000-4-6	Level 3	
	<b>Magnetic Field</b>	BS EN/EN61000-4-8	Level 4	
	<b>Voltage Dips and Interruptions</b>	BS EN/EN61000-4-11		>95% dip 0.5 periods, 30% dip 25 periods, >95% interruptions 250 periods
NOTE	<b>MTBF</b>	121.9K hrs min. Telcordia SR-332 (Bellcore) ; 16.2K hrs min. MIL-HDBK-217F (25°C)		
	<b>DIMENSION</b>	540*424*83.5mm (L*W*H)		
	<b>PACKING</b>	25Kg; 1pcs/25Kg/2.82CUFT		
1. All parameters NOT specially mentioned are measured at $\Delta$ 230VAC(Y 400VAC) input, rated load and 25°C of ambient temperature. 2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uf & 47uf parallel capacitor. 3. Tolerance: includes set up tolerance, line regulation and load regulation. 4. During withstand voltage and isolation resistance testing, the screw "A" shall be temporarily removed, and shall be installed back after the testing. 5. Derating may be needed under low input voltages. Please check the derating curve for more details. 6. If use PV signal to adjust Vo, under creatin operation conditions, ripple noise of Vo might go over rating defined in this specification. 7. Need additional EMI filter to meet regulations of EMC conducted and radiated emission. Characteristics of EMI filter please refer to the table, Minimum Insertion Loss. 8. The efficiency is measured at $\Delta$ : 230VAC/Y: 400VAC input. The efficiency level is measured at output voltage 115V(115V model)/230V(230V model)/380V(380V model). 9. The power supply is considered a component which will be installed into a final equipment. All the EMC tests are been executed by mounting the unit on a 600mm*900mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies." (as available on <a href="http://www.meanwell.com">http://www.meanwell.com</a> ) 10. The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft). 11. An unstable O/P voltage is expected in the first 300ms after power on. A minimum load of 5% is suggested if fast load change is required at power on phase. ※ Product Liability Disclaimer : For detailed information, please refer to <a href="https://www.meanwell.com/serviceDisclaimer.aspx">https://www.meanwell.com/serviceDisclaimer.aspx</a>				


## ■ Block Diagram

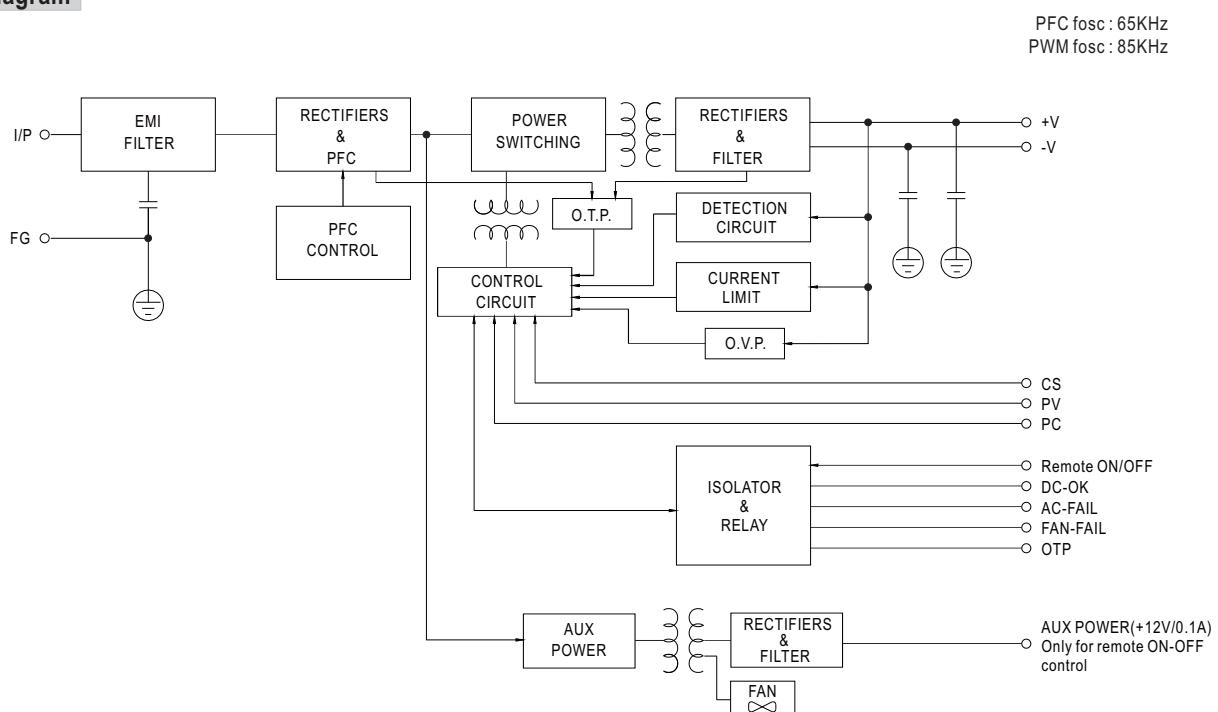


## ■ DERATING CURVE

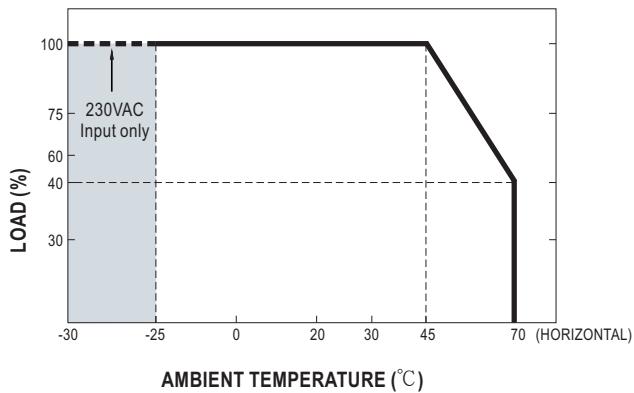

## ■ STATIC CHARACTERISTICS

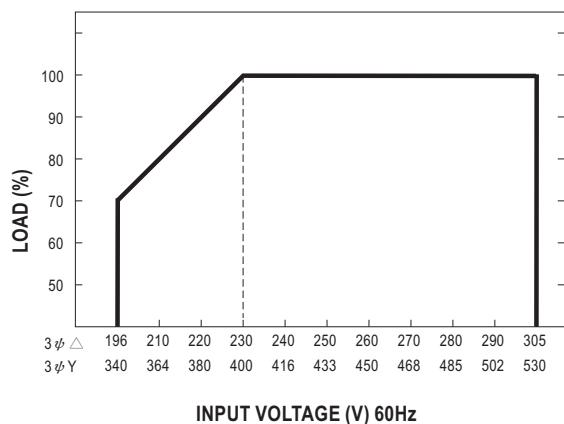

## ■ EFFICIENCY VS LOAD (380V MODEL)

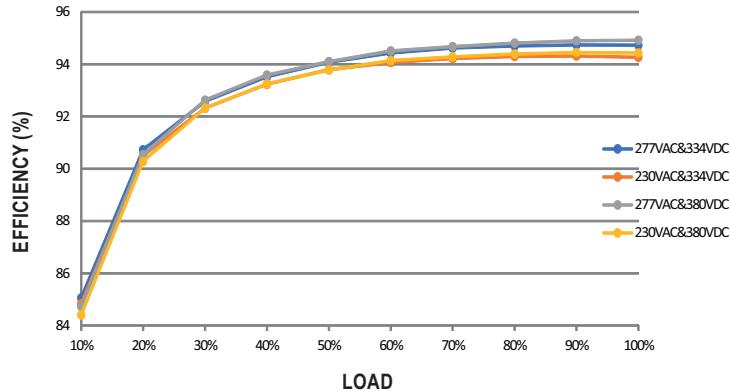

INPUT VOLTAGE (V) 60Hz

## ■ AC Power Connection

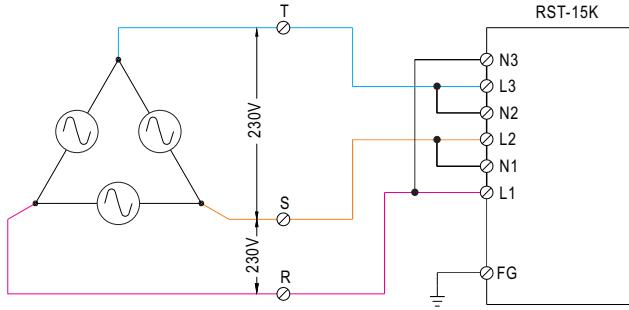
 ◎3  $\psi$  3-wire /  $\triangle$ 196~305VAC


Fig 1.1

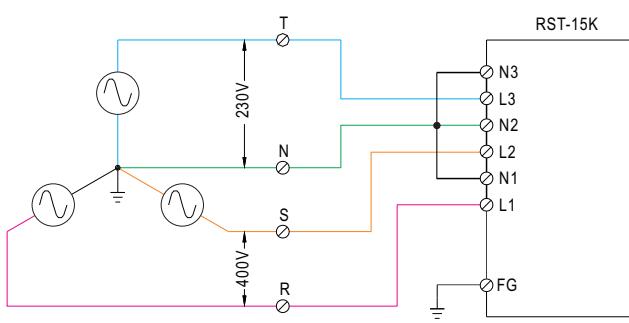
 ◎3  $\psi$  4-wire / Y 340~530VAC


Fig 1.2

 ■ Note : RST-15K can also be operated by 1  $\psi$  2-wire 196~305VAC input. Please refer to the connection diagram below.

Operating with 1  $\psi$  2-wire may lead to certain characteristics different from the specification, such as the larger Ripple and Noise. Should there be any issues, please contact MEAN WELL.

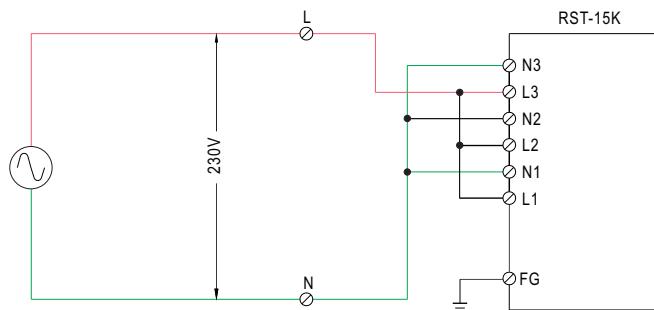


Fig 1.3

## Function Manual

### 1. Output Voltage Programming (or, PV / remote voltage programming / remote adjust / margin programming / dynamic voltage trim)

(1) Default by potentiometer (SVR)

(a) Have the DIP switch position-3 set as 

(b) Output voltage can be trimmed by SVR.

(2) By Output Voltage Programming

(a) Have the DIP switch position-3 set as 

(b) The output voltage can be trimmed to 1~120% by applying EXTERNAL VOLTAGE between PV+ and PV- on CN26 or CN27.



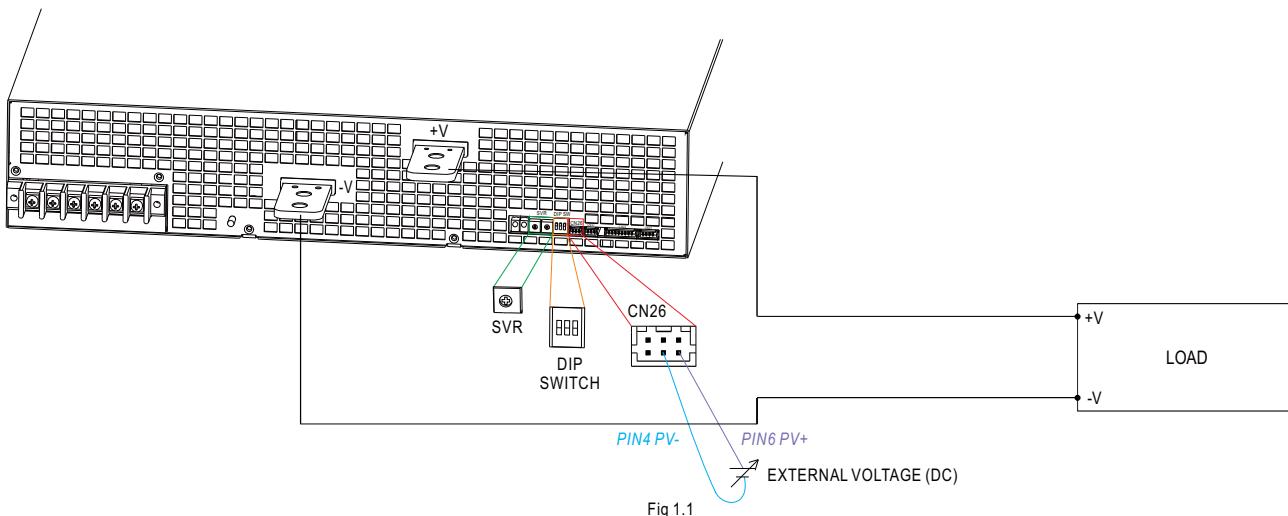


Fig 1.1

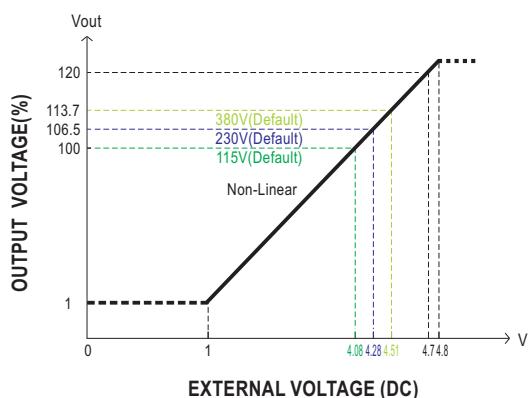

◎ The 100% output voltage is 115/216/334V.

◎ When PV signal to adjust voltage under  $V_o < 11.5V$  (115V model) / 21.6V (230V model) / 33.4V (380V model) with dynamic load condition, the  $V_o$  overshoot & undershoot might go over rating.

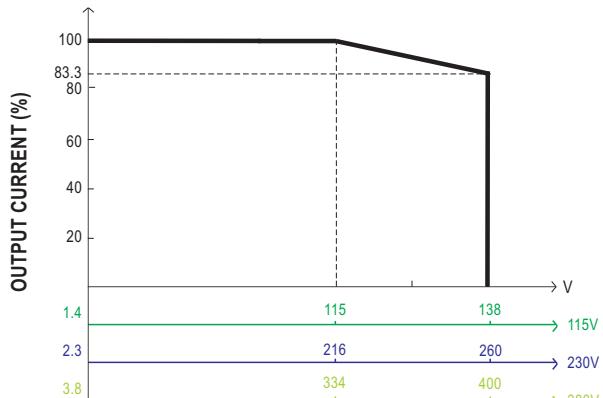

◎ The rated current should change with the Output Voltage Programming accordingly.

◎ Maximum output current is Based on rated power wattage.

Fig 1.2

## 2. Constant Current Programming (or, PC / remote current programming / dynamic current trim)

(1) Default Overload Protection(OLP) 100~107% of rated current

- (a) Have the DIP switch position-2 set as
- (b) Output current is set default value.

(2) by Constant Current Level Programming

- (a) Have the DIP switch position-2 set as
- (b) The constant current level can be trimmed to 20~100% of the rated current by applying EXTERNAL VOLTAGE between PC+ and PC- on CN26 or CN27.

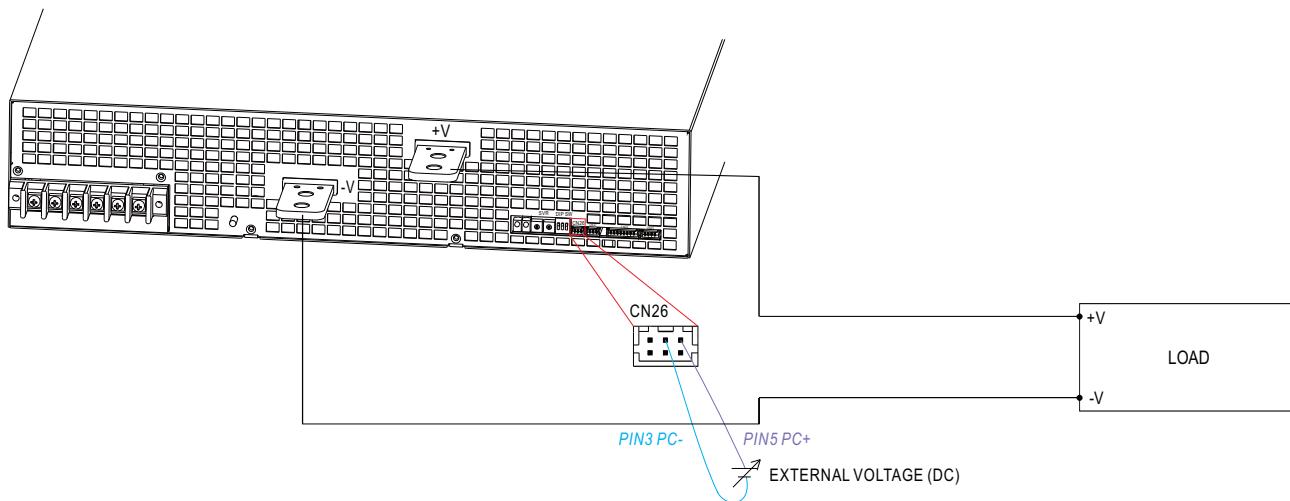


Fig 2.1

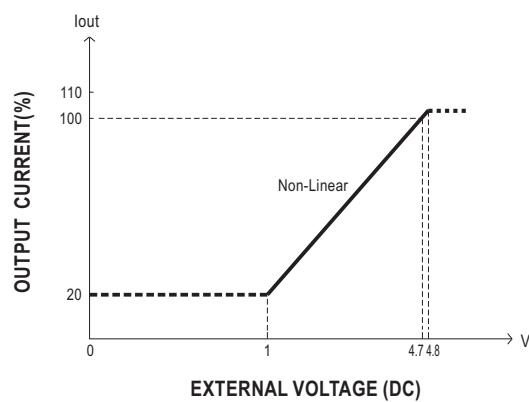


Fig 2.2

◎ Output will shut down after O/P voltage is below < 80% of Vset for 6 sec, re-power on to recover.

◎ The 100% output current is Maximum current.

## 3. Select Overload Protection (OLP) Mode

(1) Default Continuous Constant Current mode

Have the DIPswitch position-1 set as , and RST-15K will work in continuous constant current mode when the output is overloaded and the output voltage is greater than 50% of the rated output voltage.

(2) Delay Shutdown mode


Have the DIPswitch position-1 set as , and RST-15K will shut down after 5 seconds of constant current operation, when the output is overloaded or short-circuited.

#### 4. Remote ON-OFF Control

※ The power supply can be turned ON-OFF by using the "Remote ON-OFF" function.

Between Remote ON-OFF(CN25 pin5) and 12V-AUX(CN25 pin1)	Output Status
Switch close (Short)	power supply ON
Switch open (Open)	power supply OFF

Table 4.1

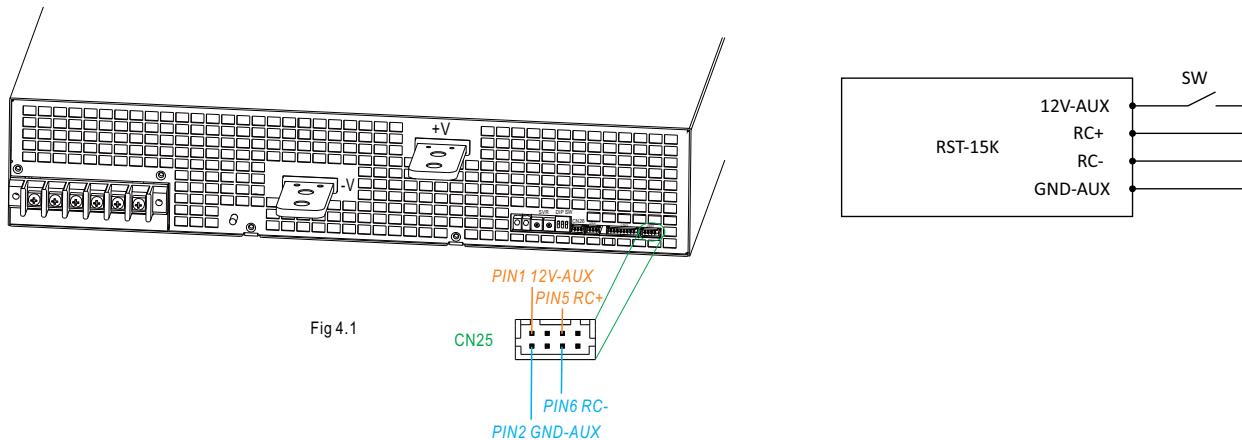

#### 5. Alarm Signal Output

※ There are 4 alarm signals on CN22, and each signal can select two types of output circuit.

(1) Relay contact output {OTP1, OTP1-GND} ; (DC-OK1, DC-OK1-GND) ; (AC-FAIL1-GND, AC-FAIL1) ; (FAN-FAIL1-GND, FAN-FAIL1)}

Normally open contact. "Short" when the alarm arises. Relay contact rating(maximum) is 30V/1A resistive.

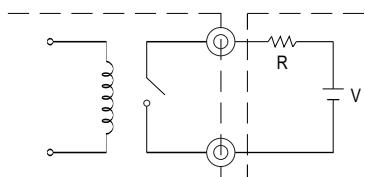


Fig 5.1

(2) Open collector output {DC-OK2-GND, DC-OK2} ; (AC-FAIL2-GND, AC-FAIL2) ; (OTP2, OTP2-GND) ; (FAN-FAIL2, FAN-FAIL2-GND)}

An external voltage source is required for this function that is shown in Fig 5.2. These signals are isolated from output. The maximum sink current is 10mA and the maximum external voltage is 20V (there is a built-in 24V zener diode in inner circuitry).

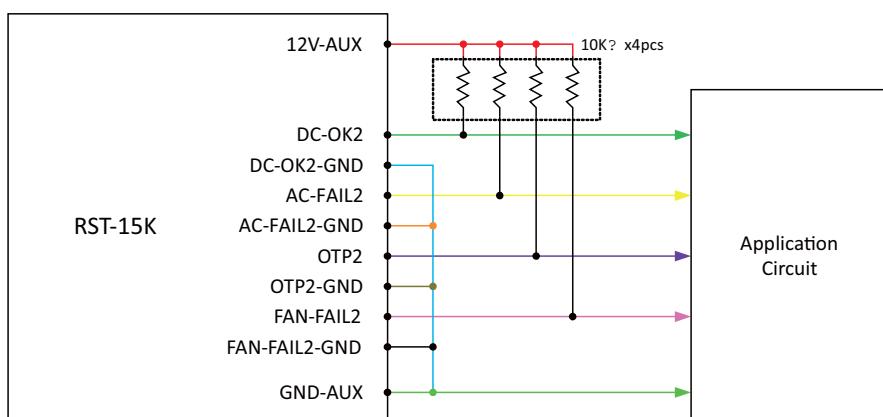


Fig 5.2

### 6. Current Sharing


RST-15K has the built-in active current sharing function and can be connected in parallel, up to 2 units, to provide higher output power as exhibited below :

※ The voltage difference among each output should be minimized that less than 0.2V is required.

※ The total output current must not exceed the value determined by the following equation.

Maximum output current at parallel operation=(The rated current per unit)x(Number of unit)x0.95


※ When the total output current is less than 5% of the total rated current, or say (5% of Rated current per unit)  $\times$  (Number of unit) the current shared among units may not be fully balanced.

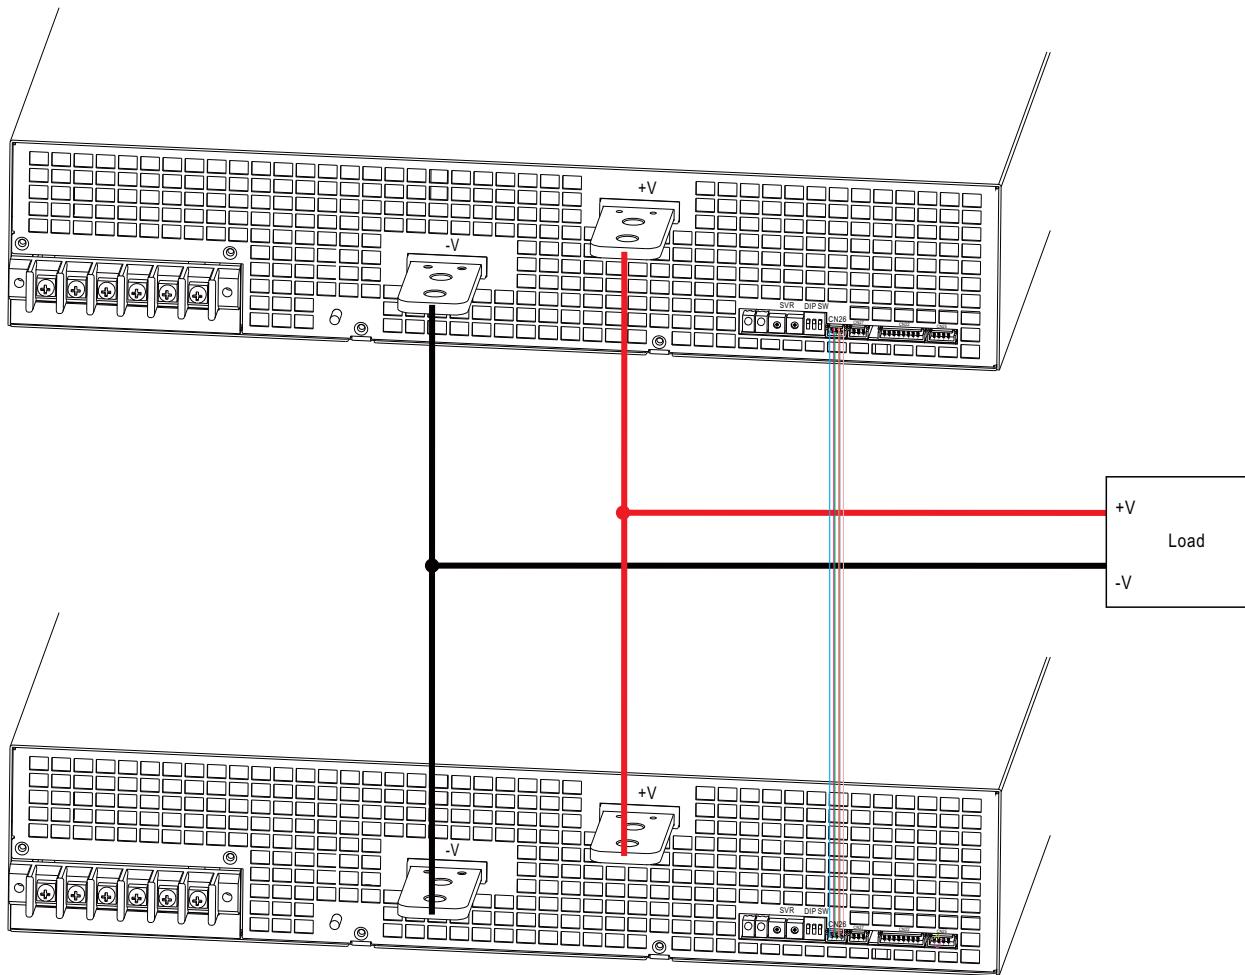

◎ CS+, CS- and RC+, RC- are connected mutually in parallel.


### Mechanical Specification

Case No.234B Unit:mm

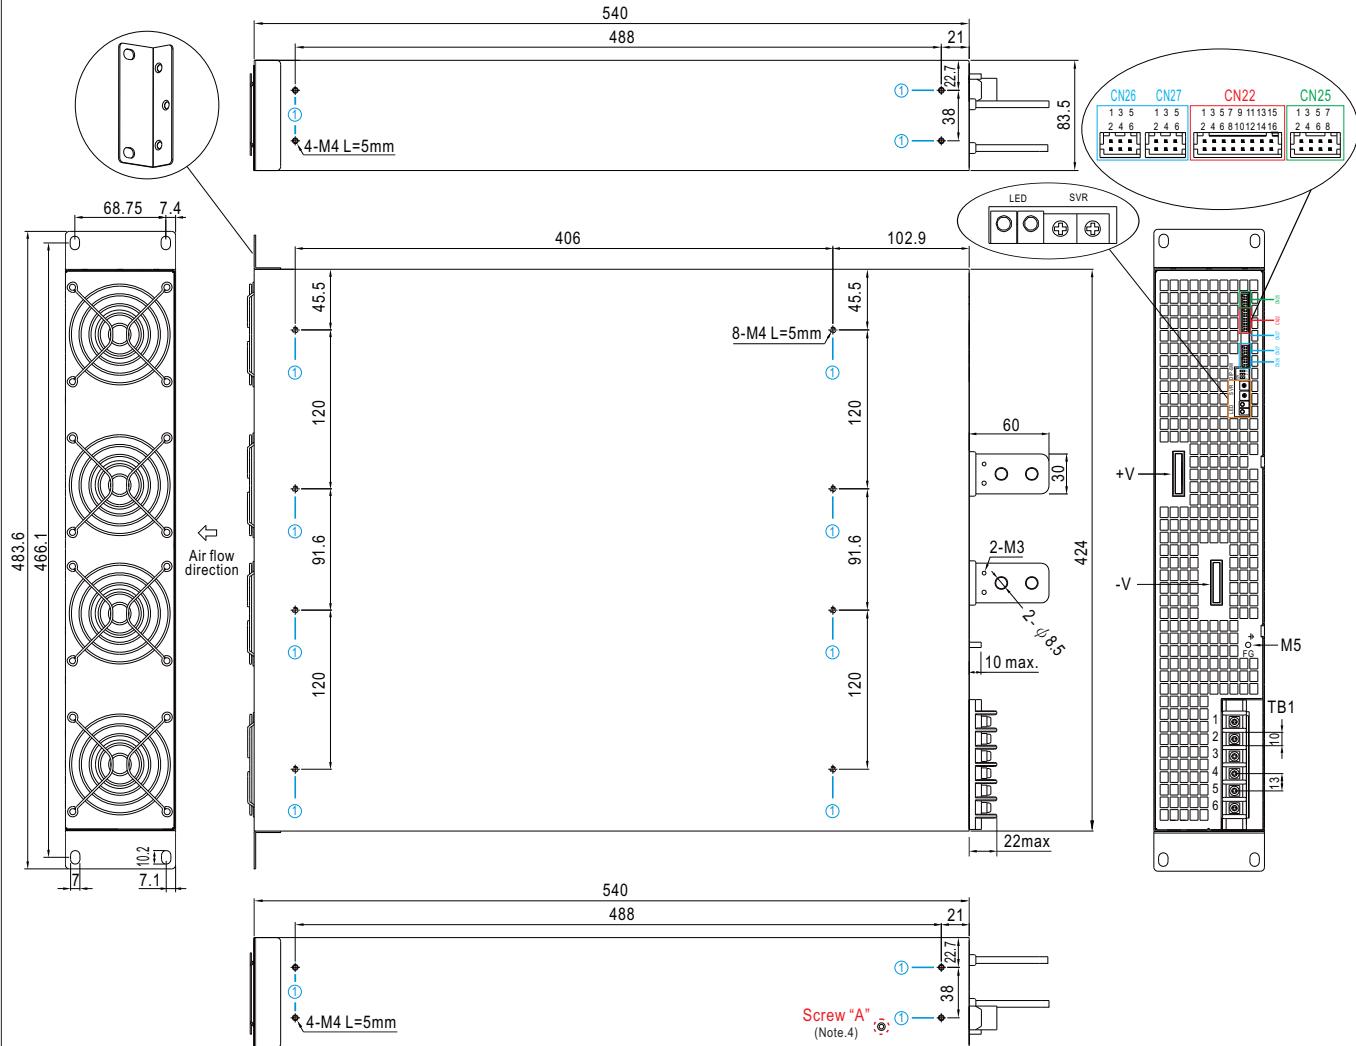


#### Mounting Instruction

Hole No.	Recommended Screw Size	MAX. Penetration Depth L	Recommended mounting torque
①	M4	5mm	7~10Kgf-cm

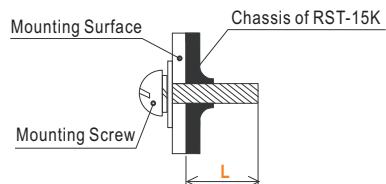

#### Control Pin No. Assignment (CN26,CN27): HRS DF11-06DP-2DS or equivalent




Mating Housing	HRS DF11-06DS or equivalent
Terminal	HRS DF11-**SC or equivalent

2 6

① CN26 and CN27 are connected internally.

Pin No.	Function	Description
1	CS-	Current sharing signal. When units are connected in parallel, the CS pins of the units should be connected to allow current balance between units.
2	CS+	
3	PC-	Connection for output current programming.
4	PV-	Connection for output voltage programming.
5	PC+	Connection for output current programming.
6	PV+	Connection for output voltage programming.


※ Control Pin No. Assignment (CN22) : HRS DF11-16DP-2DS or equivalent

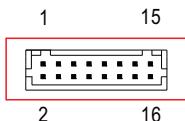

Mating Housing	HRS DF11-16DS or equivalent
Terminal	HRS DF11-**SC or equivalent

Pin No.	Function	Description
1	DC-OK1	Alarm signal of DC-OK. Normally open contact. "Short" when the PSU turns on. Relay contact rating(maximum) is 30V/1A resistive.
2	AC-FAIL1	Alarm signal of AC-fail. Normally open contact. "Short" when the PSU input voltage is too low. Relay contact rating(maximum) is 30V/1A resistive.
3	DC-OK1-GND	Alarm signal of DC-OK. Normally open contact. "Short" when the PSU turns on. Relay contact rating(maximum) is 30V/1A resistive.
4	AC-FAIL1-GND	Alarm signal of AC-fail. Normally open contact. "Short" when the PSU input voltage is too low. Relay contact rating(maximum) is 30V/1A resistive.
5	DC-OK2	Alarm signal of DC-OK. Open collector signal. Low when the PSU turns on. The maximum sink current is 10mA and the maximum external voltage is 20V.
6	AC-FAIL2	Alarm signal of AC fail. Open collector signal. Low when the PSU input voltage is too low. The maximum sink current is 10mA and the maximum external voltage is 20V.
7	DC-OK2-GND	Alarm signal of DC-OK. Open collector signal. Low when the PSU turns on. The maximum sink current is 10mA and the maximum external voltage is 20V.
8	AC-FAIL2-GND	Alarm signal of AC fail. Open collector signal. Low when the PSU input voltage is too low. The maximum sink current is 10mA and the maximum external voltage is 20V.
9	OTP1	Alarm signal of OTP. Normally open contact. "Short" when the PSU over temperature protection occurs. Relay contact rating(maximum) is 30V/1A resistive.
10	FAN-FAIL2	Alarm signal of fan fail. Open collector signal. Low when the internal fan fails. The maximum sink current is 10mA and the maximum external voltage is 20V.
11	OTP1-GND	Alarm signal of OTP. Normally open contact. "Short" when the PSU over temperature protection occurs. Relay contact rating(maximum) is 30V/1A resistive.
12	FAN-FAIL2-GND	Alarm signal of fan fail. Open collector signal. Low when the internal fan fails. The maximum sink current is 10mA and the maximum external voltage is 20V.
13	OTP2	Alarm signal of OTP. Open collector signal. Low when the PSU over temperature protection occurs. The maximum sink current is 10mA and the maximum external voltage is 20V.
14	FAN-FAIL1	Alarm signal of fan fail. Normally open contact. "Short" when the internal fan fails. Relay contact rating(maximum) is 30V/1A resistive.
15	OTP2-GND	Alarm signal of OTP. Open collector signal. Low when the PSU over temperature protection occurs. The maximum sink current is 10mA and the maximum external voltage is 20V.
16	FAN-FAIL1-GND	Alarm signal of fan fail. Normally open contact. "Short" when the internal fan fails. Relay contact rating(maximum) is 30V/1A resistive.

※ Control Pin No. Assignment (CN25) : HRS DF11-08DP-2DS or equivalent



Mating Housing	HRS DF11-08DS or equivalent
Terminal	HRS DF11-**SC or equivalent

Pin No.	Function	Description
1,3	12V-AUX	Auxiliary voltage output, 11.4~12.6V, referenced to pin 2,4(GND-AUX). Only for remote on-off control & Alarm signal. The maximum load current is 0.1A. This output is not controlled by the "Remote ON/OFF" function.
2,4	GND-AUX	Auxiliary voltage output GND. The signal return is isolated from the output terminals (+V & -V).
5,7	RC+	
6,8	RC-	The output can be turned ON-OFF in association with RC+ and RC-.

## ※LED Status Indicators

LED	Description
Green(LED1)	LED on when output voltage is OK
Red(LED2)	LED on when any protection occurs

## ※AC Input Terminal Pin No. Assignment (TB1)


Pin No.	Assignment	Pin No.	Assignment	Diagram	Maximum mounting torque
1	AC/L1	4	AC/N2		
2	AC/N1	5	AC/L3		
3	AC/L2	6	AC/N3		18Kgf-cm

## ※DIP Switch Position Assignment(DIP-SW): Please refer to the Function Manual.

Pin No.	Assignment	Diagram
1	Overload Protection (OLP)	
2	Output Current Programming (PC)	
3	Output Voltage Programming (PV)	

## ■ GUIDANCE OF ADDITIONAL FILTER

## 1.Schematic

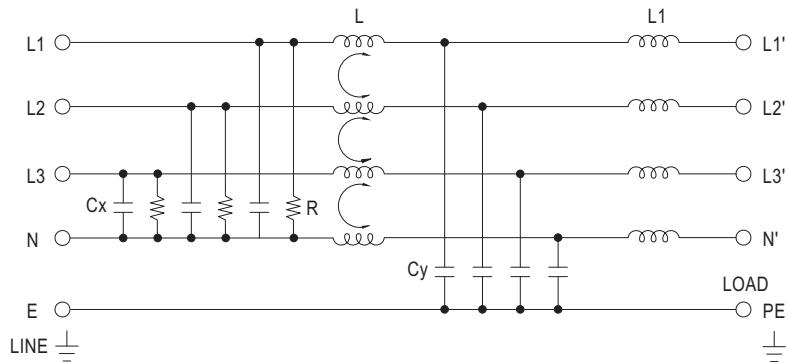

 2.Minimum insertion loss (In dB at 50  $\Omega$  system): Filter model FN 354-25-47 or equivalent

FREQ. MHz	0.01	0.05	0.10	0.15	0.50	1.0	5.0	10	30
COM. MODE dB	2	18	34	45	80	80	80	70	58
DIF. MODE dB	10	18	30	45	60	55	76	80	66

## 3.Minimum Impedance: Core model 4A11 or equivalent

FREQ. MHz	10	20	30	50	60	80	90	100	120
Z( $\Omega$ )	70.5	93.7	111	136	145	156	160	166	180

## 4.Configuration

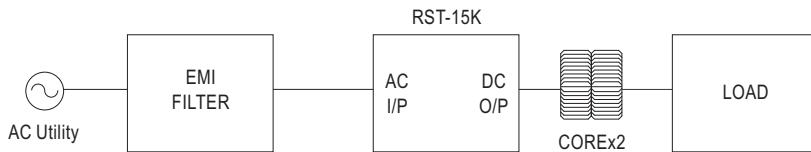

## ■ Installation Manual

 Please refer to : <http://www.meanwell.com/manual.html>